

Time-Lapse Installation & Navigation Guide

Time-Lapse Installation & Navigation Guide

Contents

Windows 2



Installation Instructions	3
Live View	12
Menu	13
Settings	14
Review Mode	17

macOS 21

Installation Instructions	22
Live View	33
Menu	34
Settings	35
Review Mode	38

Chrome OS 42

Installation Instructions	43
Live View	49
Menu	50
Settings	51
Review Mode	54

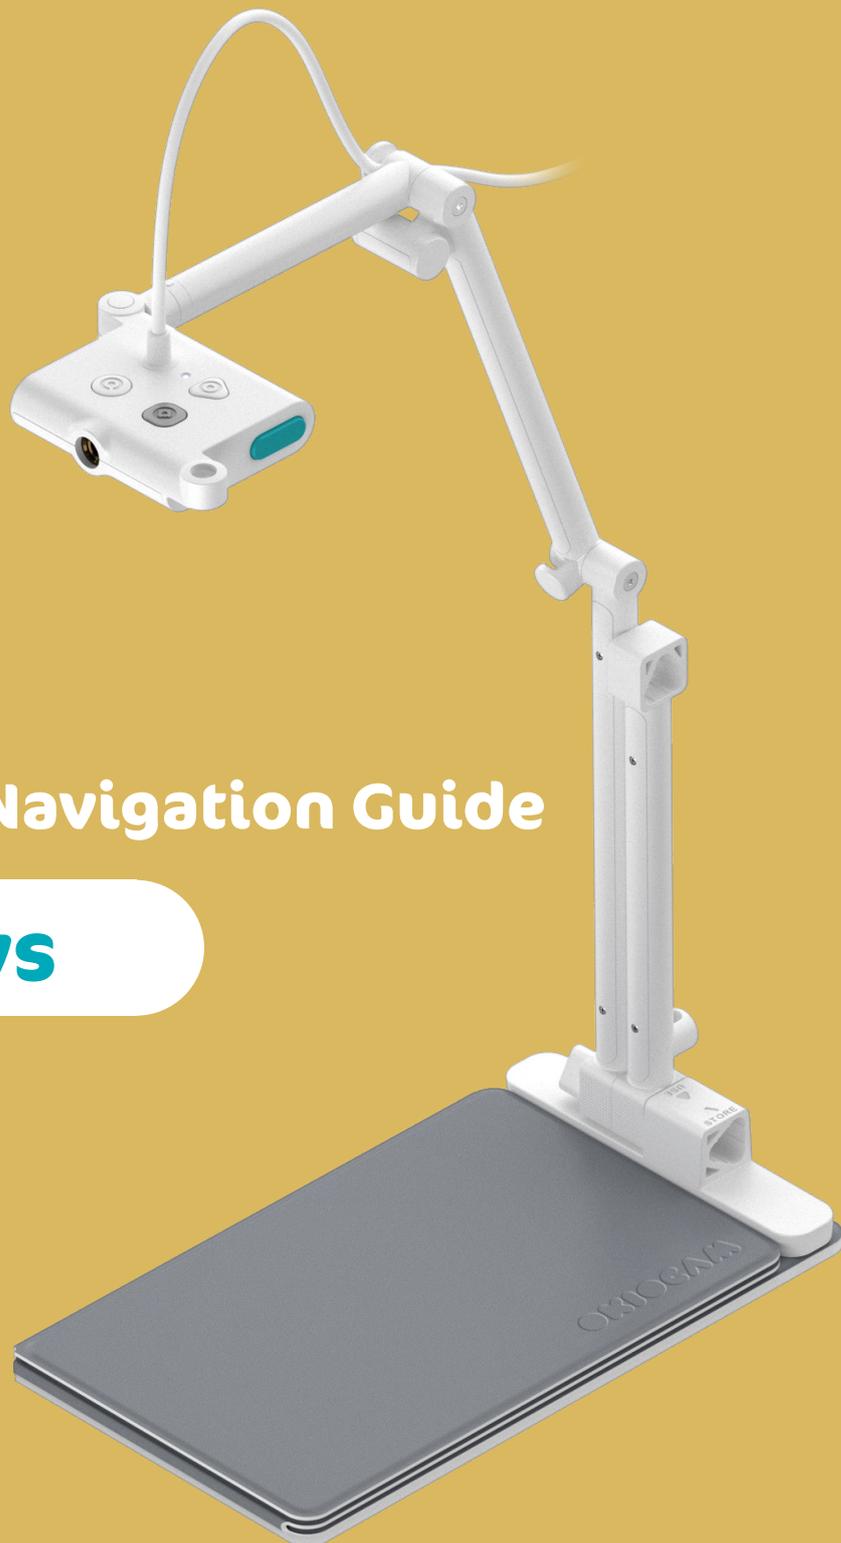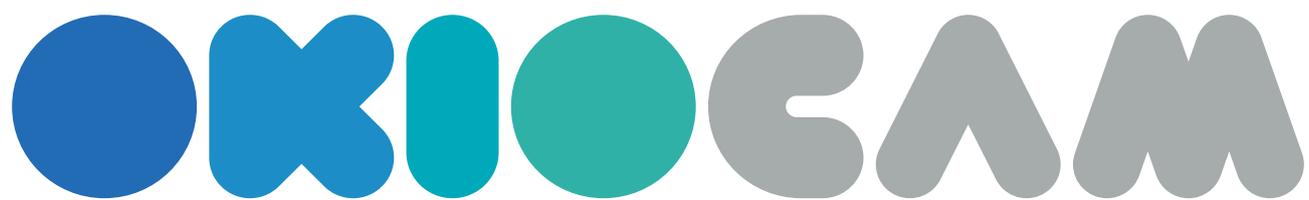

Time-Lapse Installation & Navigation Guide

Windows

OKIOCAM is the first USB camera specially designed for education users, and OKIOCAM Time-Lapse is one of the primary applications in the OKIOCAM’s product package. This guide will walk you through the installation process for OKIOCAM Time-Lapse.



It is required that you use the Google Chrome web browser.



If you have previously followed the complete installation instructions for OKIOCAM Stop Motion or OKIOCAM Snapshot and Recorder, you do not need to install OKIOCAM Button Driver again. Please skip to Step 8.



Open Google Chrome and go to the OKIOLABS download page (www.okiolabs.com/download/).




Under the heading “For Windows”, click **OKIOCAM Button Driver** to start downloading the driver installation file.




**Step
3**

After the installation file has been downloaded, click on it to view it in File Explorer.

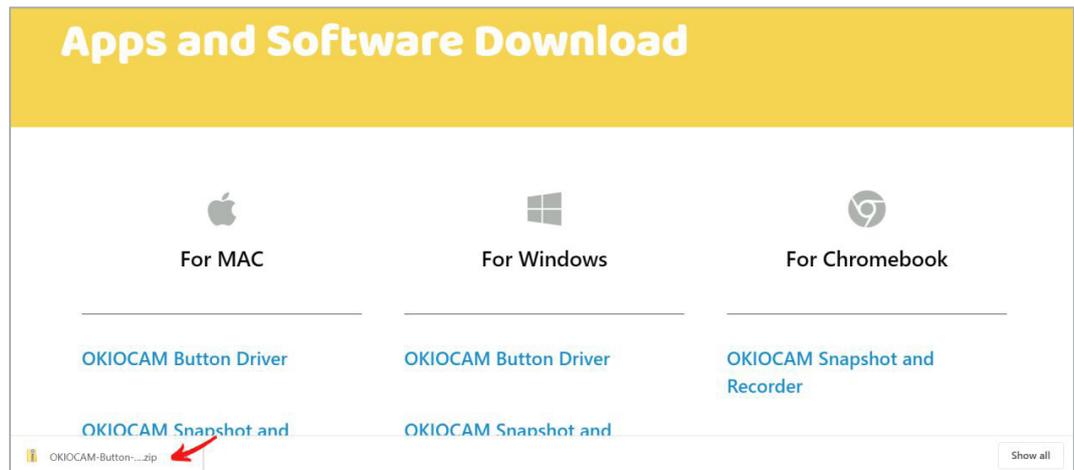
**Step
4**

Double click on the file to start the installation.

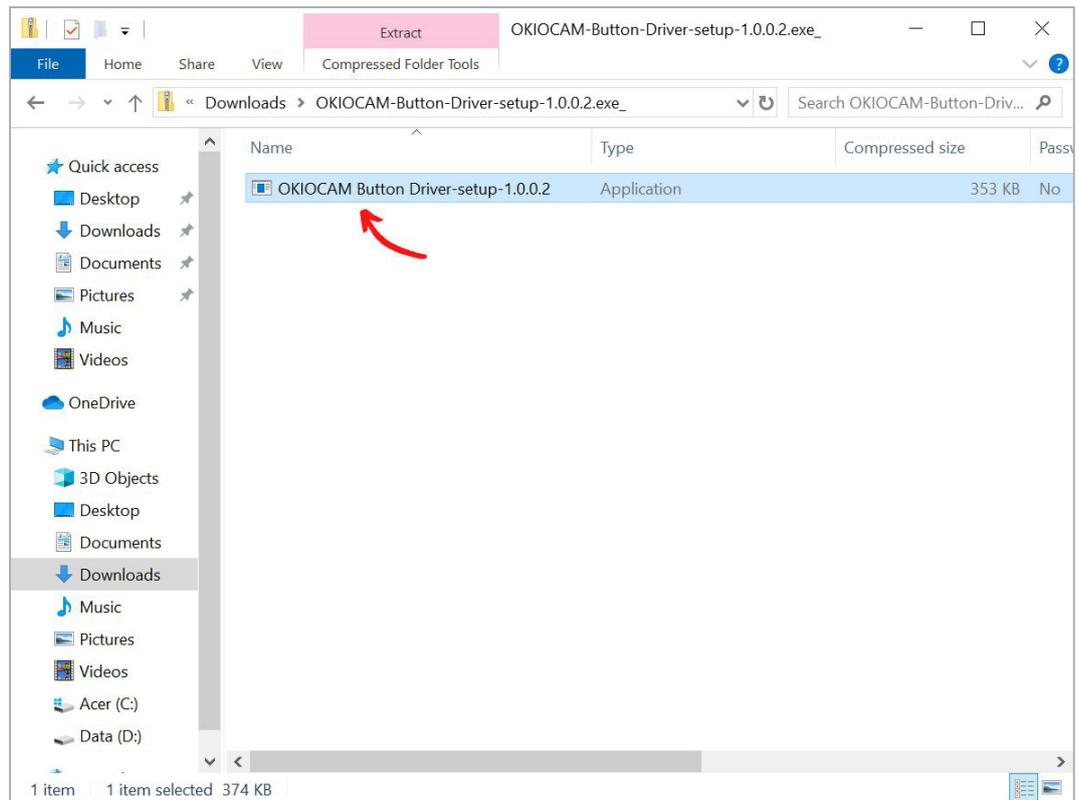


Step 5

There will be a dialog box prompting you to select the components that you wish to install. If you would like a Button Driver shortcut to appear in your Start Menu, ensure that the checkbox next to Start Menu Shortcuts is left checked. Click **Next**.

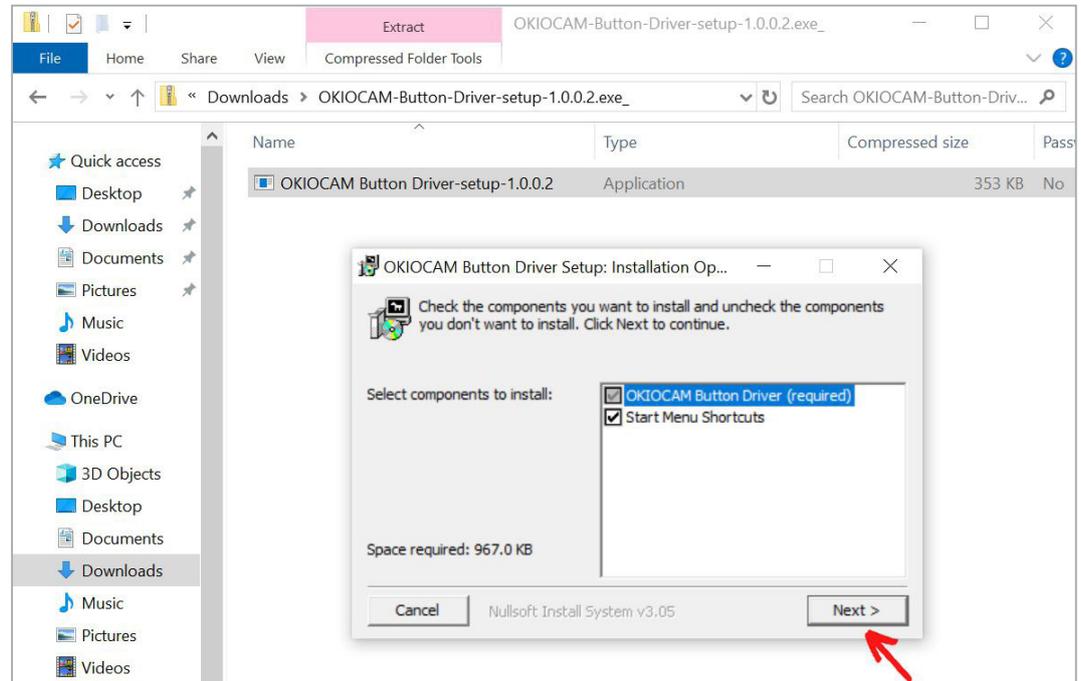


Step 6

Choose the installation location and click **Install**. If you do not wish to select a custom installation location, leave the Destination Folder unchanged.

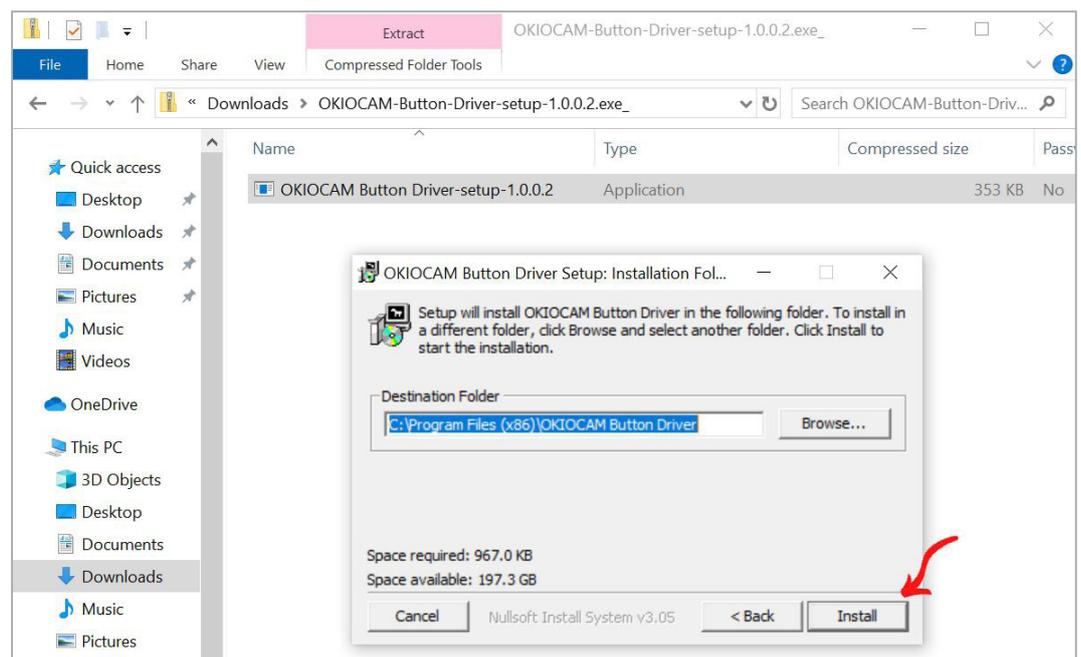


Step 7

After the installation is complete, click **Close**.

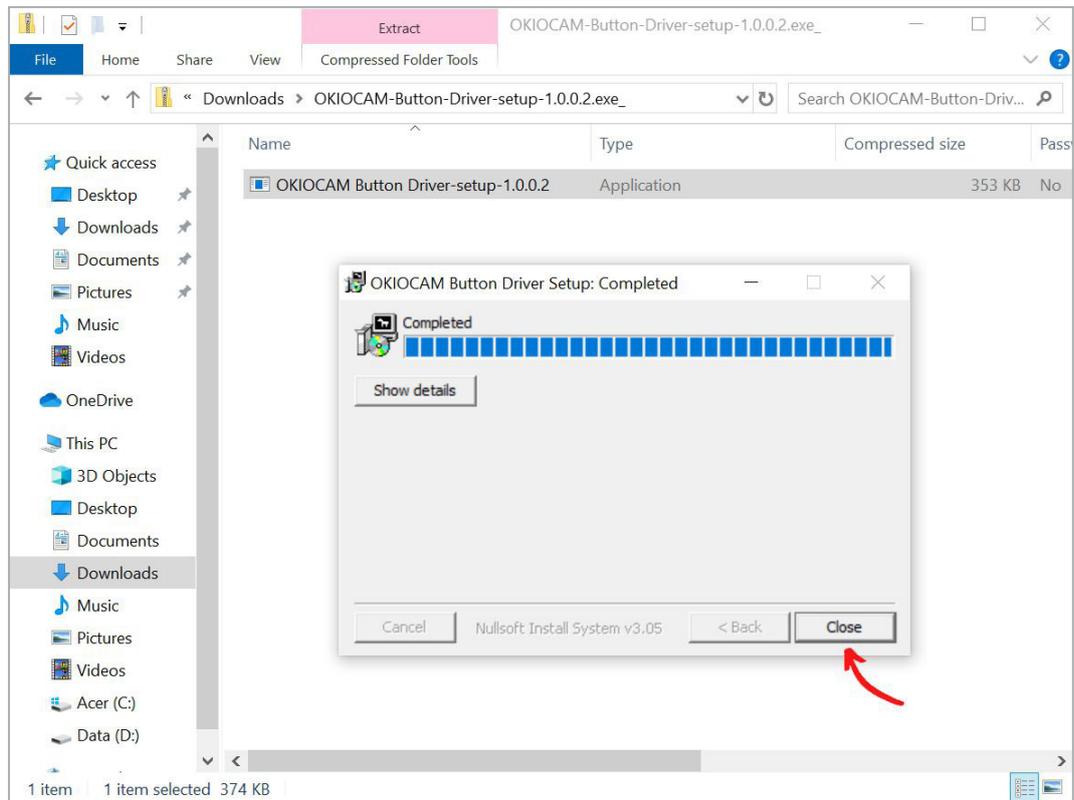


Step 8

On the OKIOLABS download page (www.okiolabs.com/download/), under the heading “For Windows”, click **OKIOLABS Time-Lapse**. A new tab will open, taking you to the Chrome Web Store.

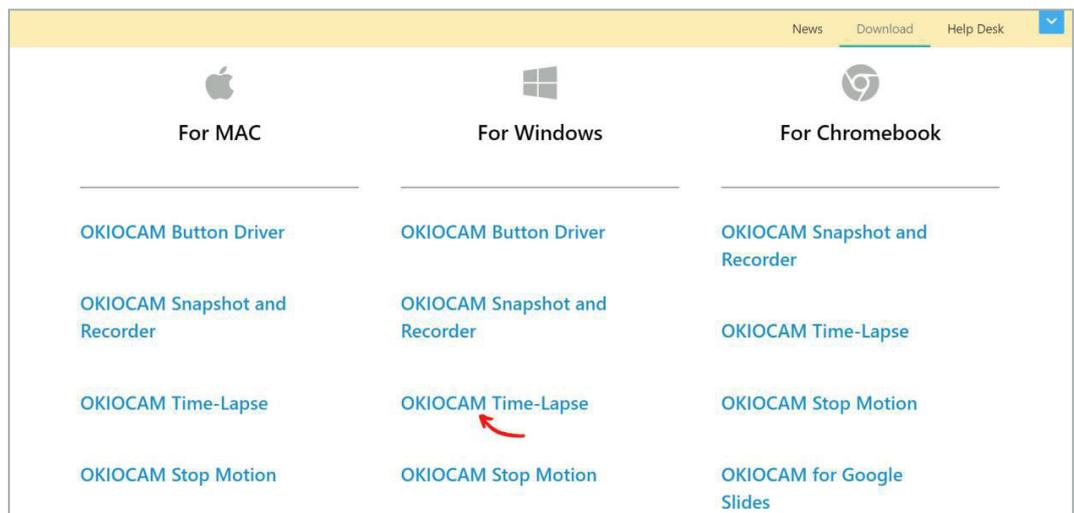


Step 9

Click **Add to Chrome**.

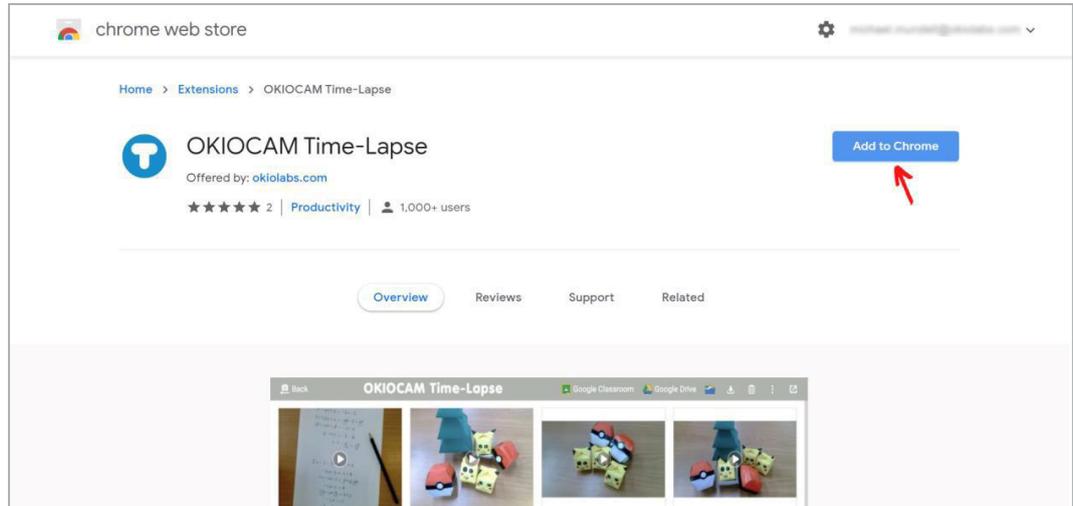


Step 10

A dialog box will pop up, asking you to confirm that you want to install the extension. Click **Add extension**. OKIOLABS Time-Lapse will then begin downloading.

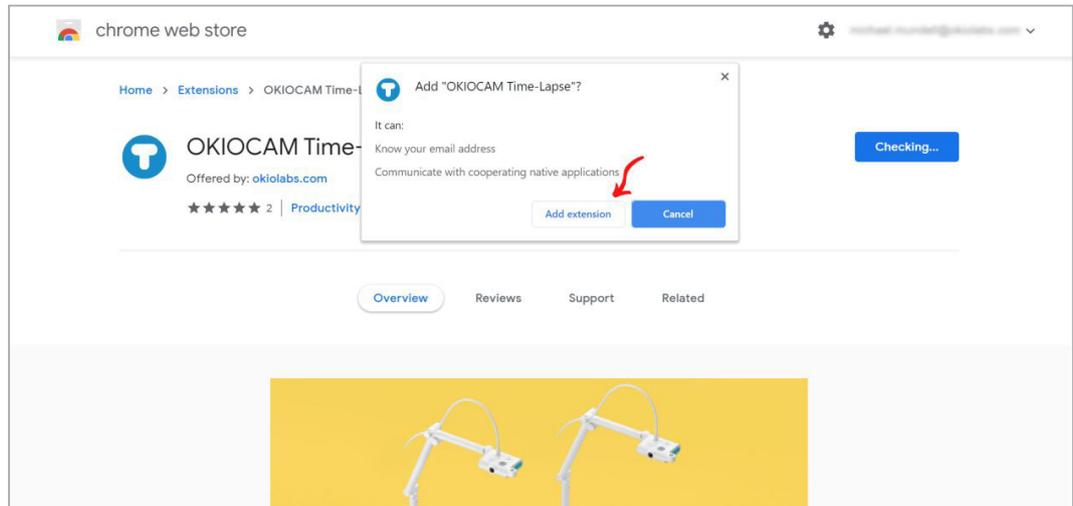


Step 11

Once OKIOLABS Time-Lapse has been added to Google Chrome, the icon <  > will appear in the top right-hand corner of your browser.

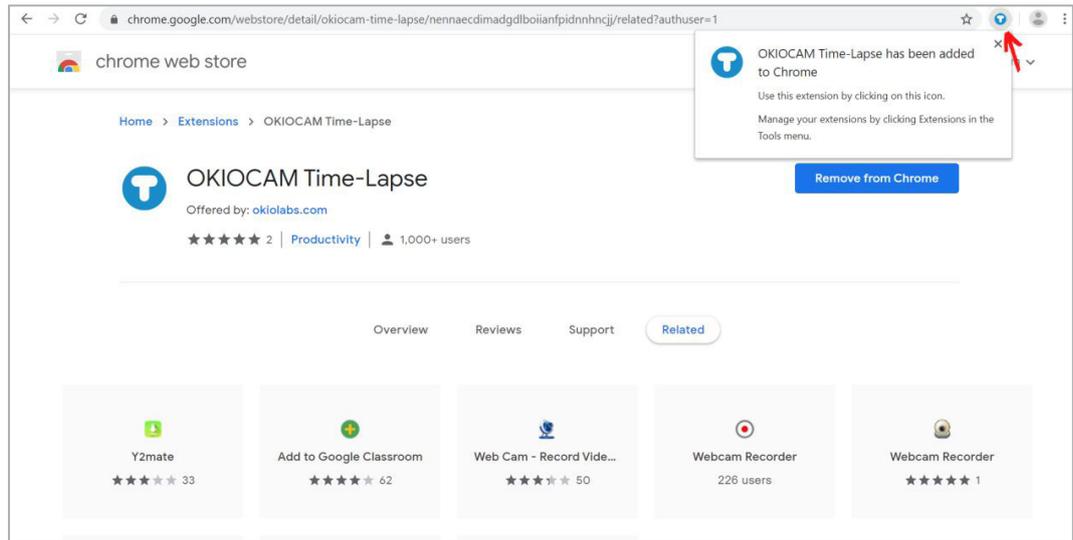


Step 12

Please click on the OKIOLABS Time-Lapse icon.

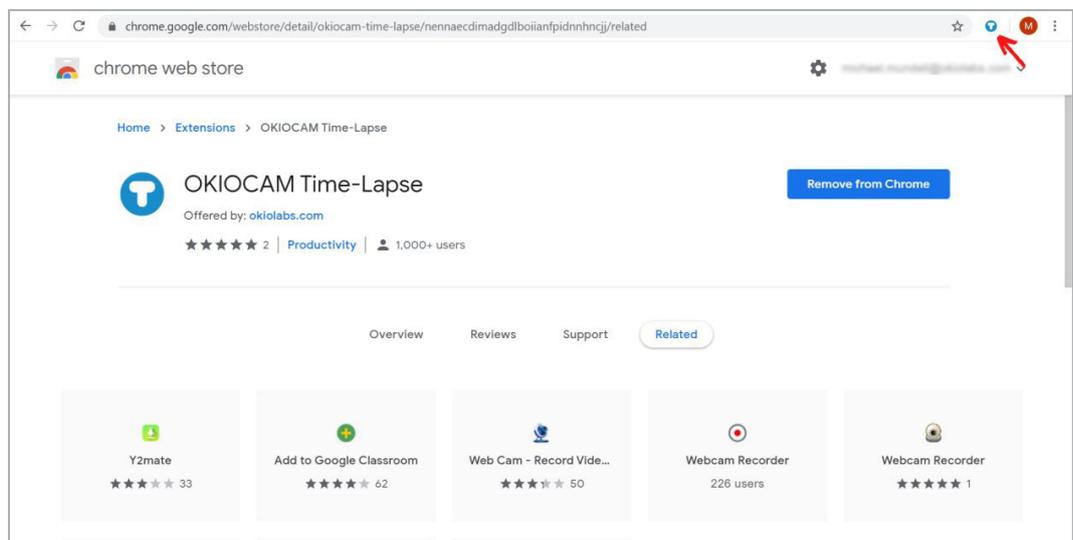


Step 13

Choose the Google account that you wish to use.

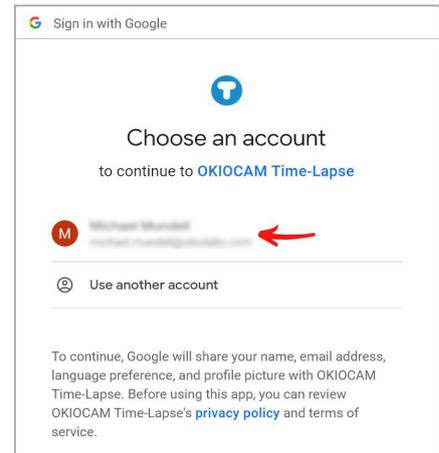

Step 14

Confirm that you grant OKIOCAM Time-Lapse access to your Google Drive and Google Classroom by clicking **Allow**.

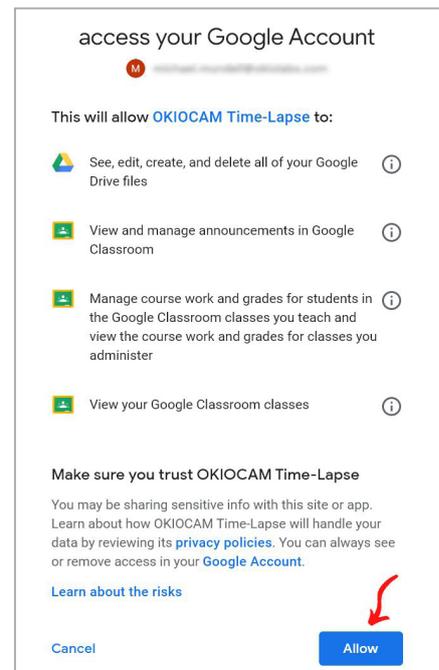


Step 15

Confirm that you give OKIOCAM Time-Lapse access to your computer's camera and microphone. Click **Allow**.




Step 16

Close this tab.

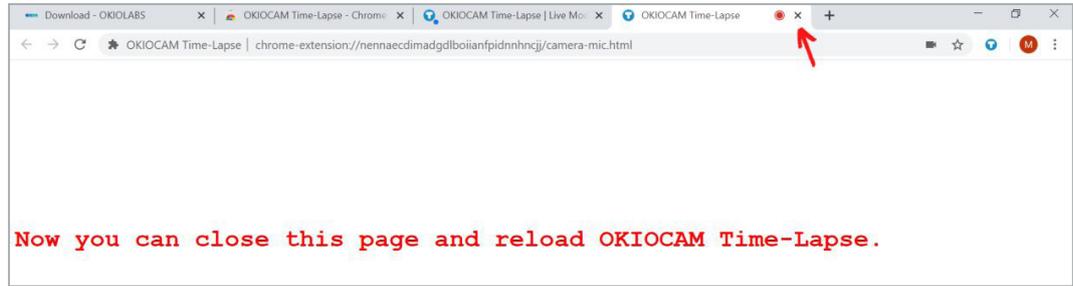


Step 17

After closing the tab, you will be presented with this interface. Click **Next**.

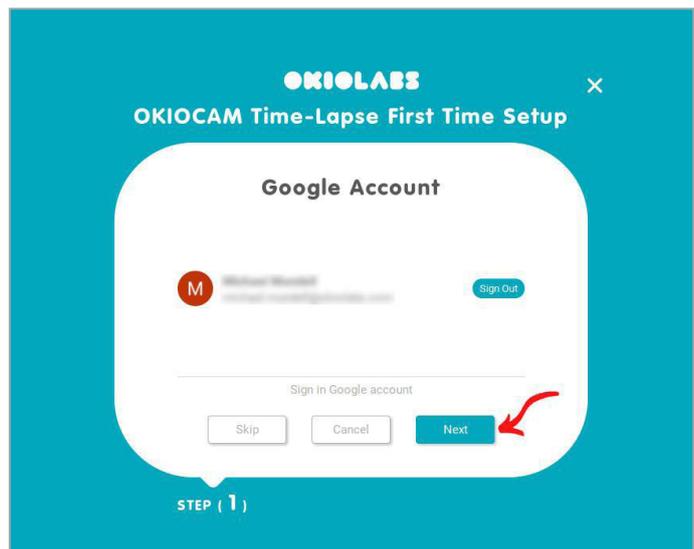


Step 18

Choose the location that you want to save your videos to. Select **Google Drive** to save them to your Google Drive. Select **On Local Device** to save them locally. It is recommended that you choose **Google Drive**. Once you have chosen, click **Next**.

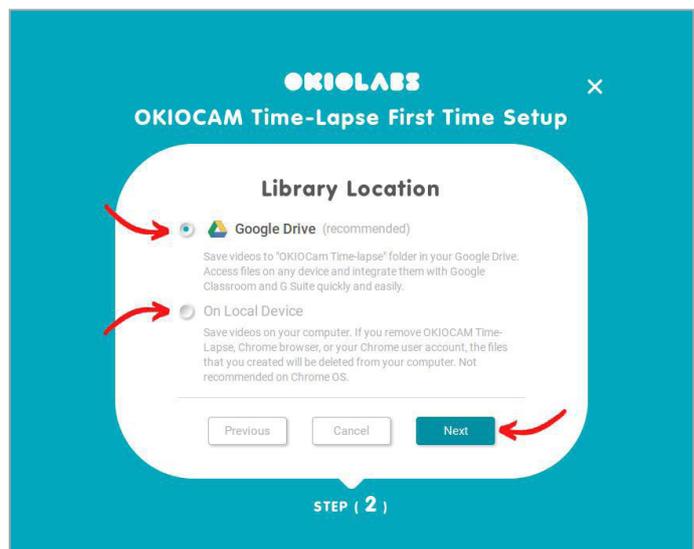


Step 19

Click **Finish**.

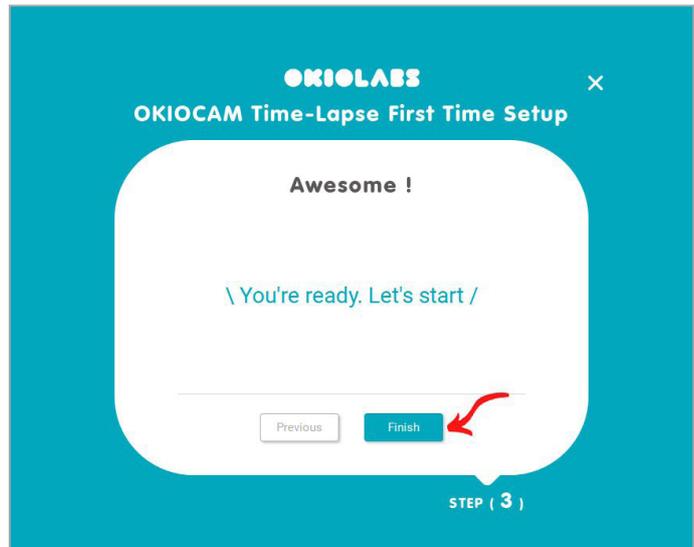

Step 20

OKIOLAB Time-Lapse is now fully installed and configured. Click the icon to launch the application.

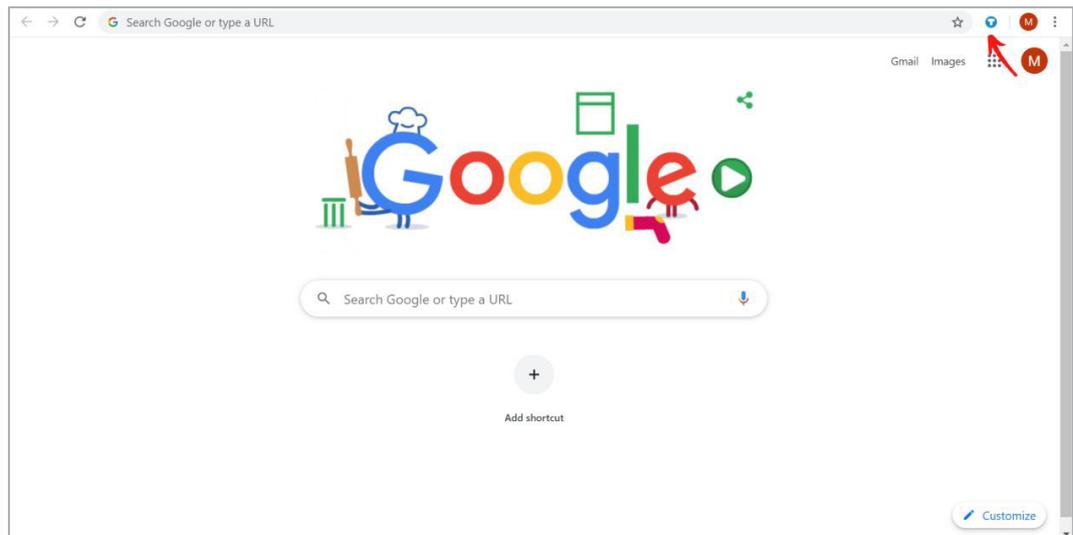


Features & Navigation: Time-Lapse


Live
View




- 1 Press  to show the **Menu**. Press again to hide.
- 2 Press  to turn on **Selfie Mode**. Press again to turn off. Selfie Mode vertically rotates the camera 180°.
- 3 Press  to switch to other OKIOCAM apps. If the other apps aren't open, they will be opened in a new tab. If the other apps aren't installed, you will be redirected to the Chrome Web Store to download and install them.
- 4 Press  to access the **Settings** menu.
- 5 Press  to toggle in and out of **Fullscreen**. You can also press Esc to exit **Fullscreen**.
- 6 Press  to access the **Settings** menu.
- 7 Press  to start recording video. Press  to pause recording. Press  to stop recording.
- 8 Press  to enter **Review Mode**.

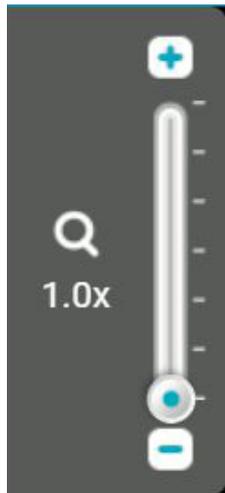

Use the **Zoom** control to adjust the level of zoom. Press the and icons to adjust the level of zoom in increments of .1x, between 1x and 6x. Zoom can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.

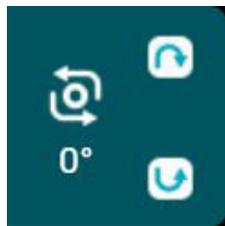

Use the **Rotate** control to rotate the camera display clockwise and counterclockwise in increments of 90°. rotates the camera display clockwise and rotates counterclockwise.

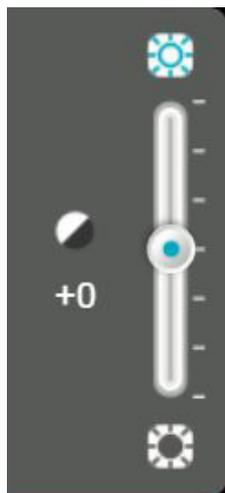

Use the **Exposure** control to adjust the level of exposure. Press the and icons to adjust the level of exposure in increments of 1, between -7 and +7. Exposure can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.



Press the **Freeze** button to freeze the camera feed.






Press the **Focus / Audio adjust** button to adjust the camera's focus, exposure, and white balance automatically.



Press the **Reset** button to reset the camera.

Settings

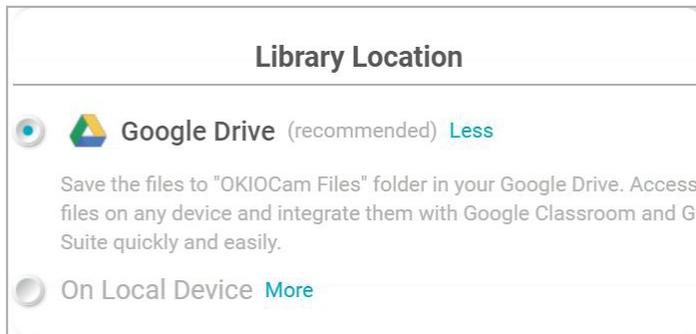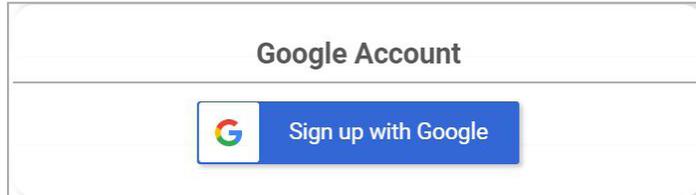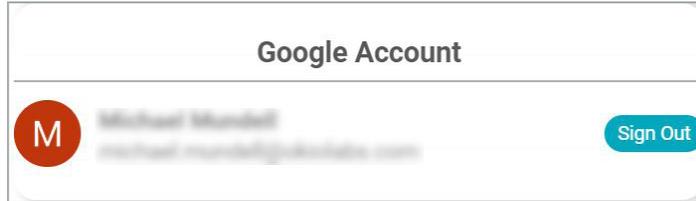

- Press **Sign Out** to sign out of the Google account that is currently signed in.
- If you are not currently signed in to a Google account, press **Sign up with Google** to sign in to one.
- Change the storage location of your time-lapse videos. Select **Google Drive** to save them to your Google Drive. Select **On Local Device** save them locally.

General Settings	
Camera	OKIOCAM S (eb1a:8021) ▼
Resolution	1600x1200 ▼
Focus Sound	Off ▼

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440
2048x1536
2592x1458
2592x1944


The resolutions available when using OKIOCAM S

The resolutions available when using OKIOCAM T


Record Settings	
Frequency	2 pics per second ▼
Auto Stop	10 minutes ▼

- From the **Camera** drop-down menu, you can choose which camera you want to use with OKIOCAM Time-Lapse.
- Use the **Resolution** drop-down menu to select which resolution you would like to view the Live View and record your time-lapse videos in. Available resolutions will depend on which camera you are using.
- Use the **Focus Sound** drop-down menu to choose if you want to hear a beeping sound after the camera focuses or not.

- From the **Frequency** drop-down menu, you can select the frequency that pictures are taken (1 picture, 2 pictures, or 3 pictures per second).
- Use the **Auto Stop** drop-down menu to choose the length of time that time-lapse recordings will automatically stop recording at.

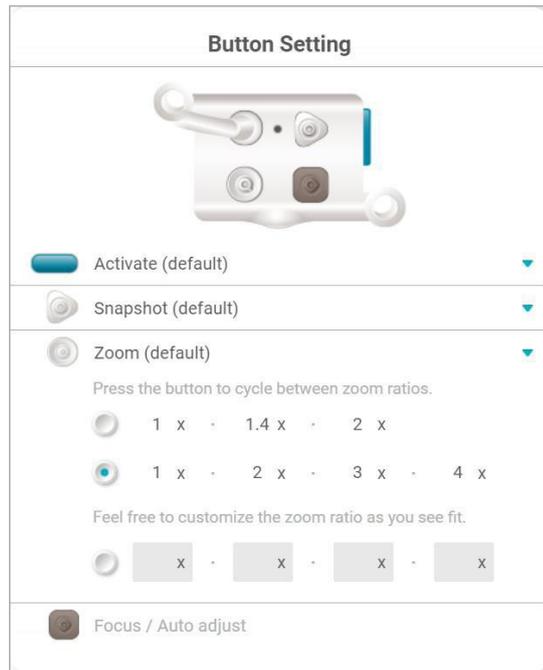

- Use the drop-down menus to reassign different functions to the physical buttons on the camera.
- Choose the zoom ratios that will be cycled through when the button assigned to zoom functionality is pressed. Input custom zoom ratios if you wish.

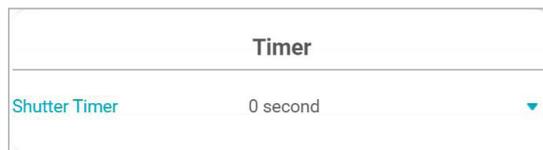

- Assign a shutter timer time of either 0, 2, or 5 seconds using the **Shutter Timer** drop-down menu.



 
Press **Quit** to exit OKIOLABS Time-Lapse.



Press **First Time Setup** to redo the initial OKIOLABS Time-Lapse setup.




Press **About Us** to learn more about available OKIOLABS apps.



Press **Help** to open the OKIOLABS FAQ.

Review Mode

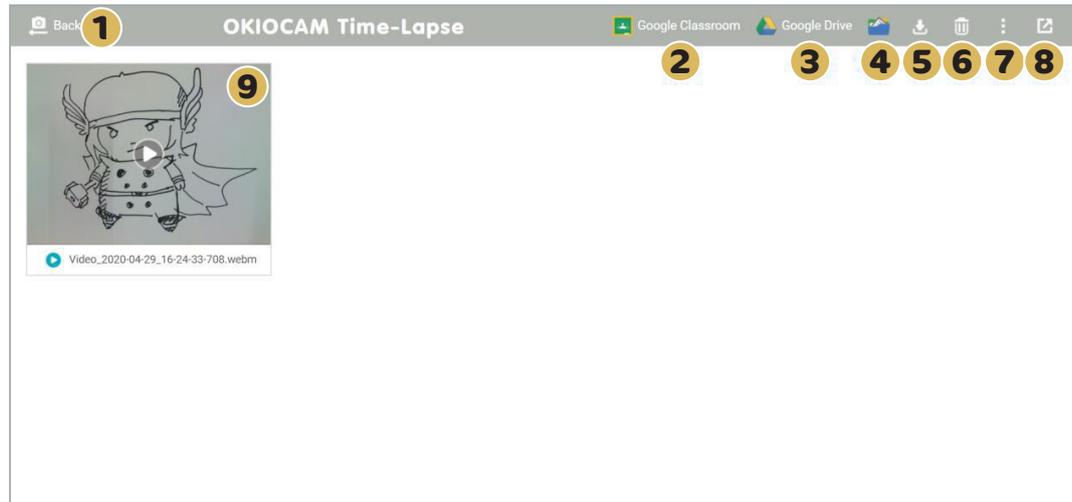

- 1 Press  to go back to the Live View.
- 2 Press **Google Classroom** to upload any selected files to your Google Classroom.
- 3 Press **Google Drive** to upload any selected files to your Google Drive.
- 4 Press  to open your Google Drive OKIOCAM Files folder in Google Drive.
- 5 Press  to download any selected files.
- 6 Press  to delete any selected files from your computer and Google Drive.
- 7 Press  to be presented with the option to delete all files, open a selected file in a new tab, or view information (File Name, Resolution, Create Date, File Size) for a selected file.
- 8 Press  to toggle in and out of **Fullscreen**.
- 9 Left-click on a file to select it. Right-click on a selected file to be presented with the options to delete the file, upload to file to Google Drive, open the file in a new tab, or download the file.


Creating Time-Lapse Videos





- 1 Press  to start recording. Press  to stop recording.
- 2 Press  to pause recording. Press  to resume recording if paused.



- 1 Drag the leftmost icon along the timeline to select the starting frame of the time-lapse video.
- 2 Drag the rightmost icon along the timeline to select the ending frame of the time-lapse video.
- 3 Drag the icon along the timeline to scan through all the frames in the current project.
- 4 The leftmost icon shows the currently selected starting frame.
- 5 The rightmost icon shows the currently selected ending frame.
- 6 Select from the , , , and icons to choose the speed rate multiplier of the final time-lapse video. Alternatively, click on the drop-down menu () to choose a number between 2 and 20 for the speed rate multiplier setting.
- 7 Select the icon to discard the time-lapse video.
- 8 Click the icon to go to the next stage of time-lapse video creation.
- 9 Press the button to preview the time-lapse video.

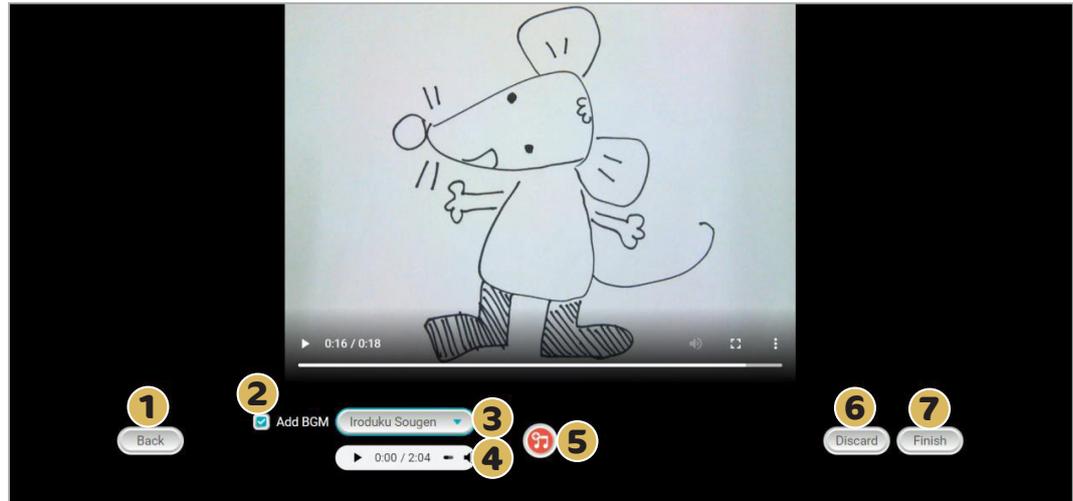

- 1 Click the icon to go back to the previous stage of time-lapse video creation.
- 2 Select the icon to add background music to the time-lapse video. Uncheck this icon if you want the time-lapse video to have no audio.
- 3 Click the drop-down menu () to either choose from a selection of royalty-free music to add to the time-lapse video or upload your own locally stored audio file. Supported file formats: MP3, WAV, OGG, and FLAC.
- 4 Use the music preview tool () to listen to the chosen audio track.
- 5 Click on the icon to merge the chosen audio file with the time-lapse video. If you wish to remove the chosen audio file, press the newly created button.
- 6 Select the icon to discard the time-lapse video.
- 7 Select the icon to finish creating the time-lapse video.

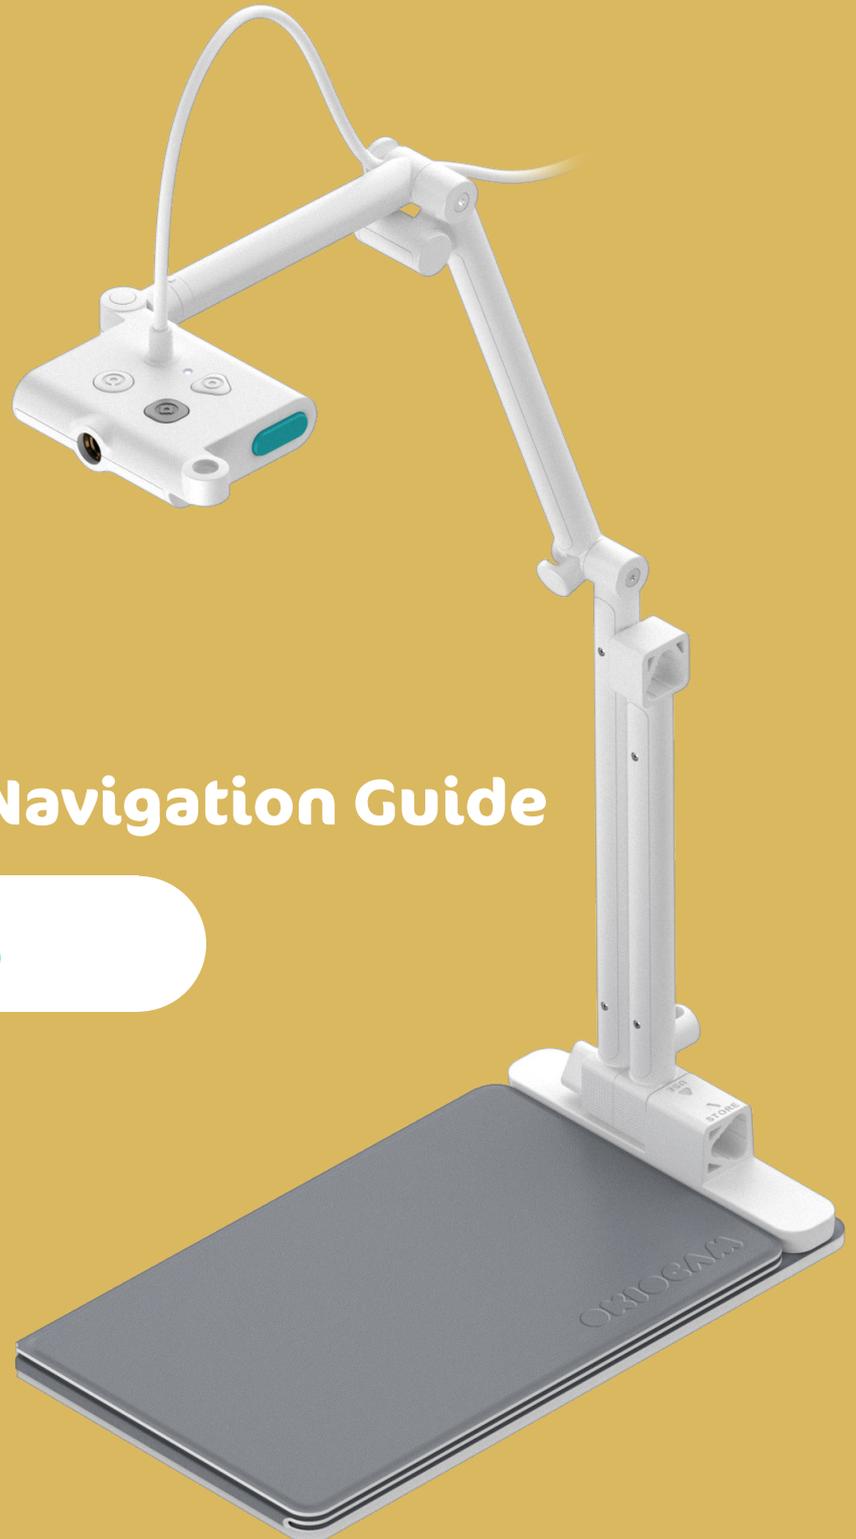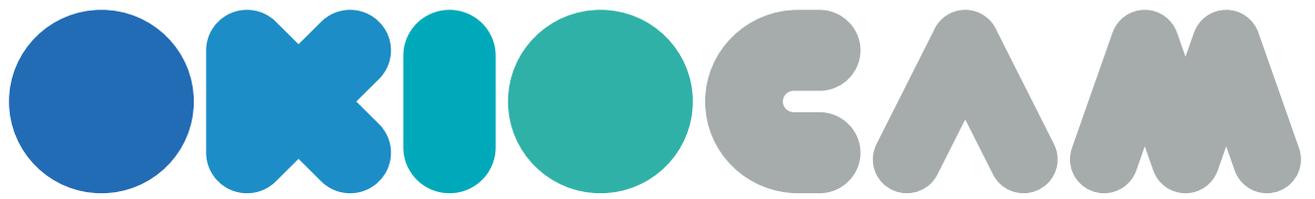

Time-Lapse Installation & Navigation Guide

macOS

OKIOCAM is the first USB camera specially designed for education users, and OKIOCAM Time-Lapse is one of the primary applications in the OKIOCAM’s product package. This guide will walk you through the installation process for OKIOCAM Time-Lapse.



It is required that you use the Google Chrome web browser.




If you have previously followed the complete installation instructions for OKIOCAM Stop Motion or OKIOCAM Snapshot and Recorder, you do not need to install OKIOCAM Button Driver again. Please skip to Step 12.



Open Google Chrome and go to the OKIOLABS download page (www.okiolabs.com/download/).




Under the heading “For MAC”, click **OKIOCAM Button Driver** to start downloading the driver installation file.

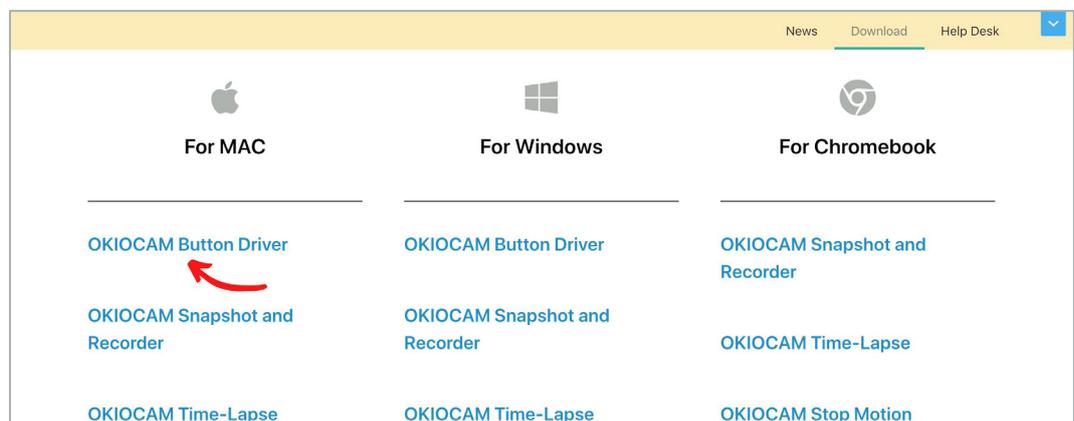


Step 3

After the installation file has been downloaded, click on it to view it in Finder.

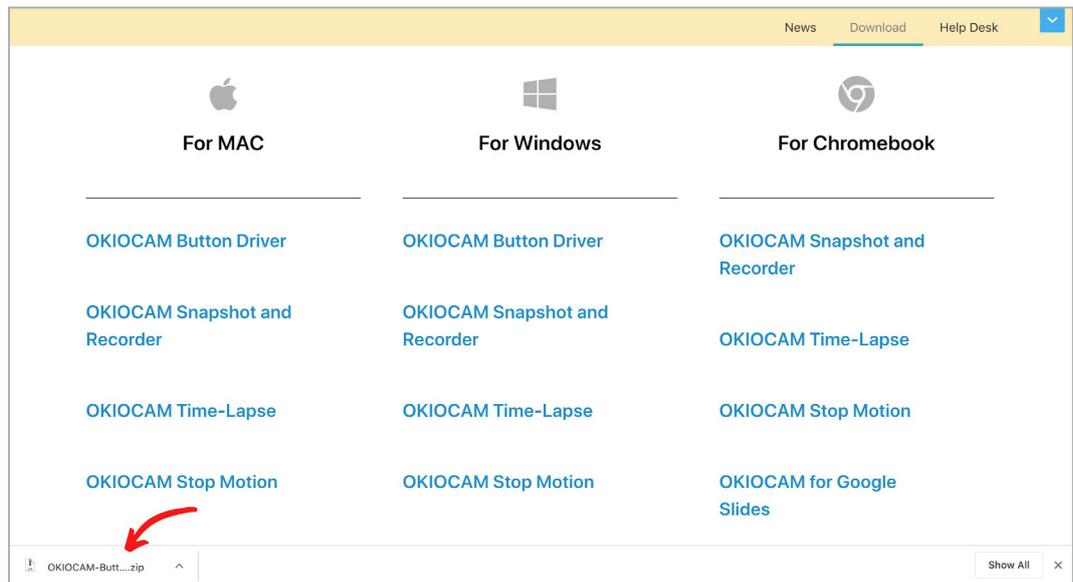


Step 4

Double click on the .dmg file to start the installation. A new window will open.

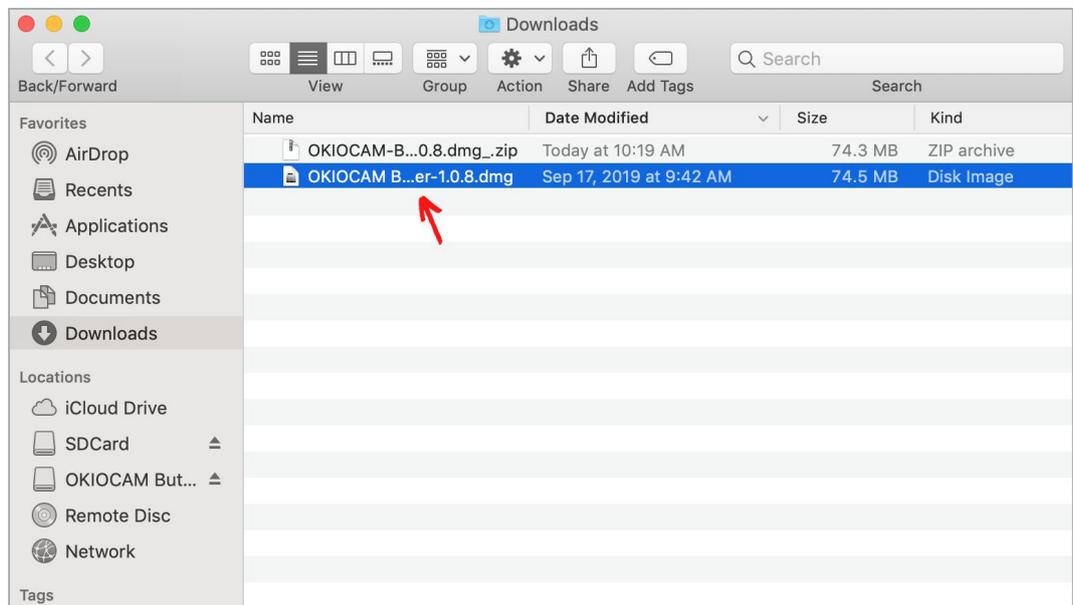


Step 5

Click on **OKIOLCAM Button Driver** and drag and drop it to **Applications**.

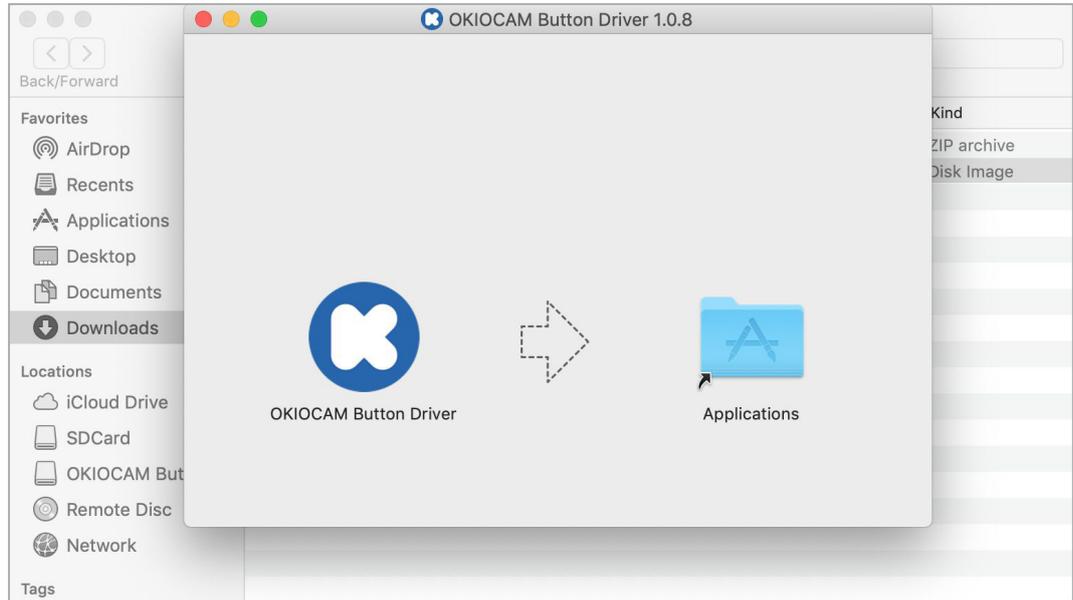


Step 6

Double click on **Applications**. The Applications folder will open.

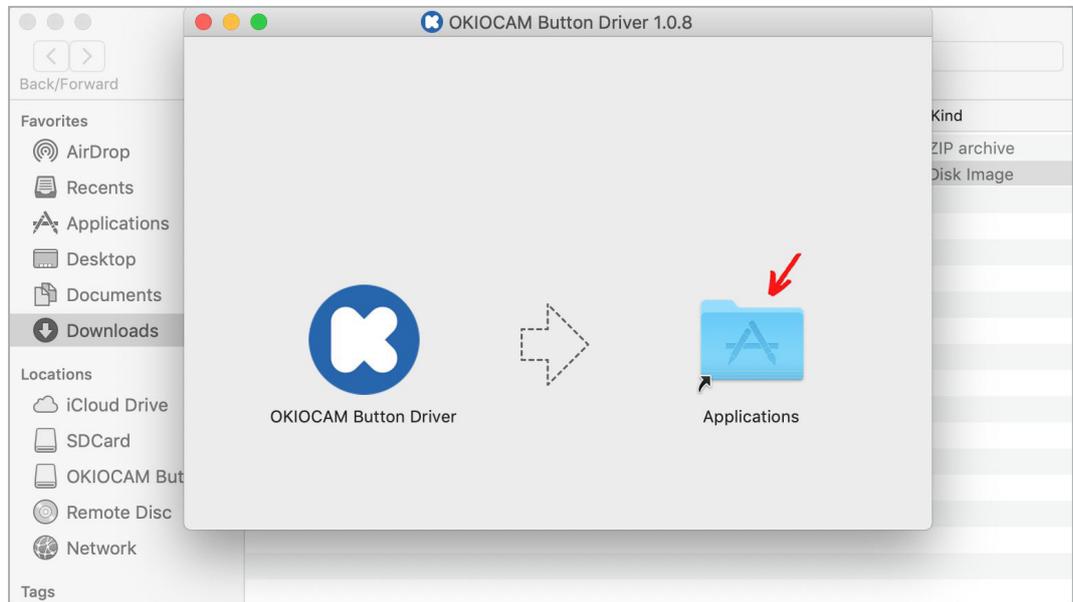


Step 7

Locate OKIOLABS Button Driver in the Applications folder. Right-click on **OKIOLABS Button Driver** and click on **Open**.

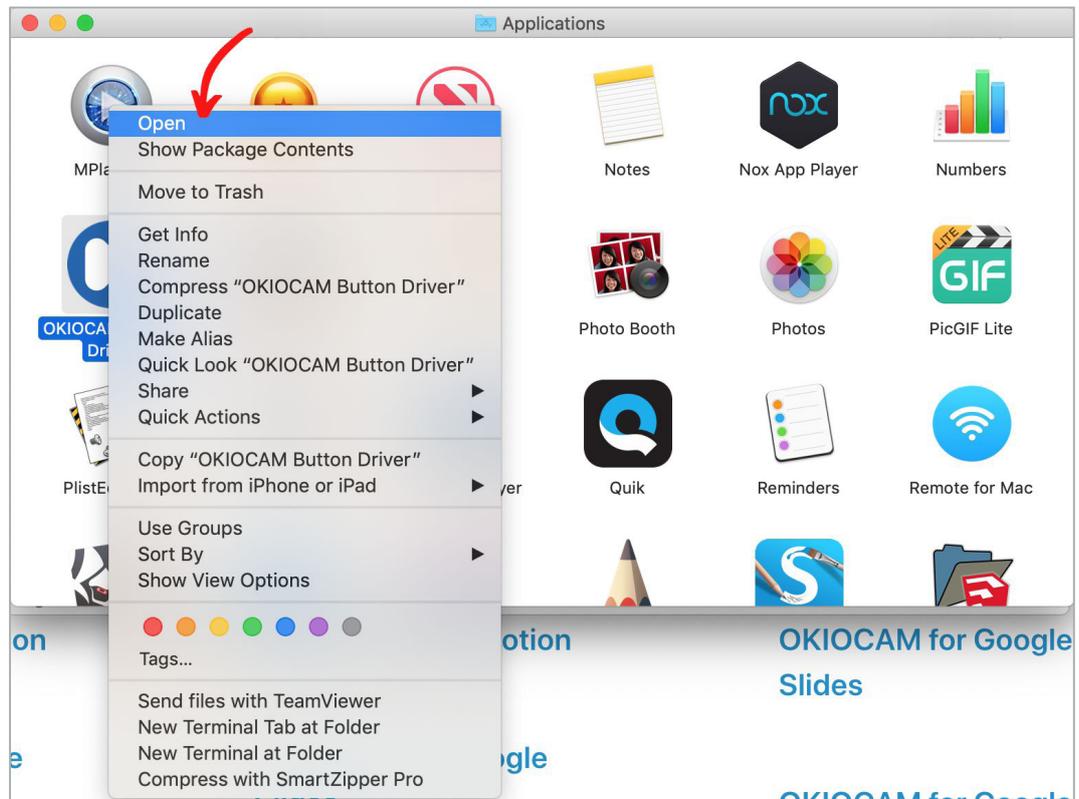


Step 8

A dialog box will appear asking you to confirm that you want to open the driver. Click **Open**.

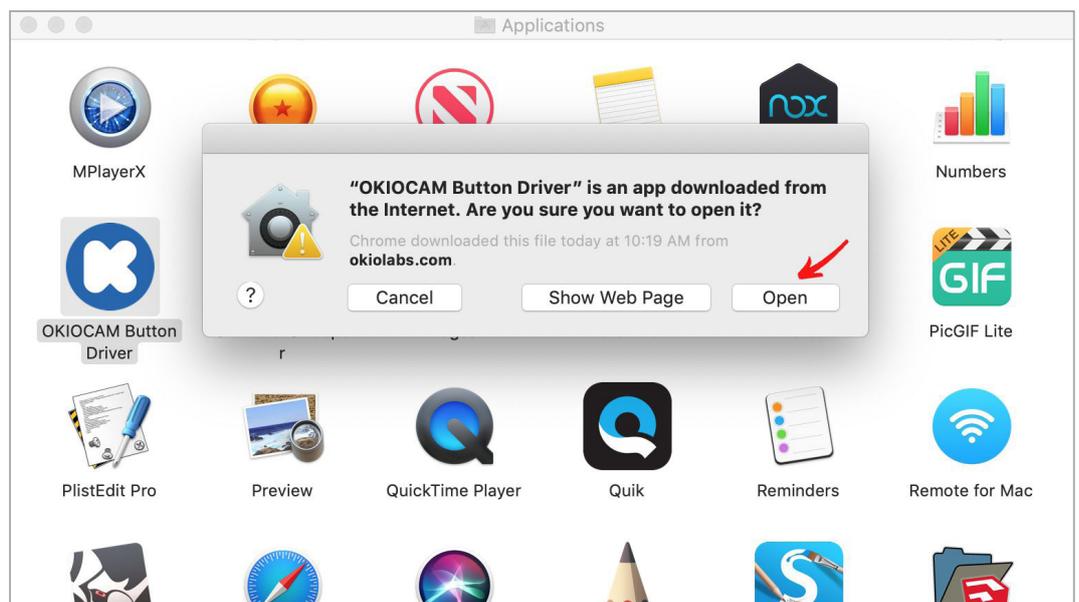

Step 9

Close the **Applications** folder.

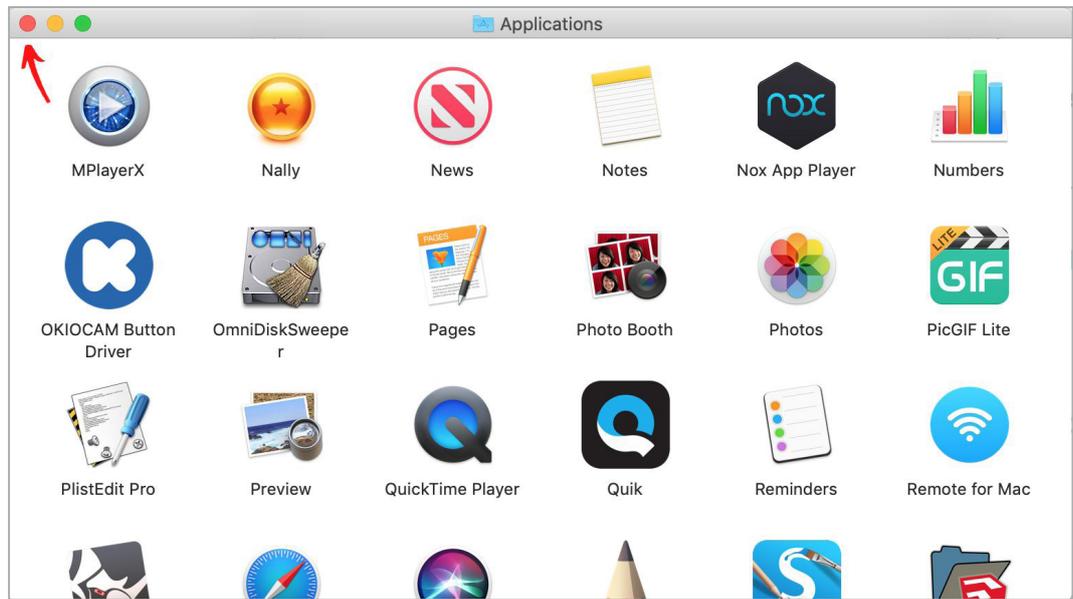


Step 10

Close the **OKIOCAM Button Driver** installation window.




Step 11

Close the **Downloads** folder.

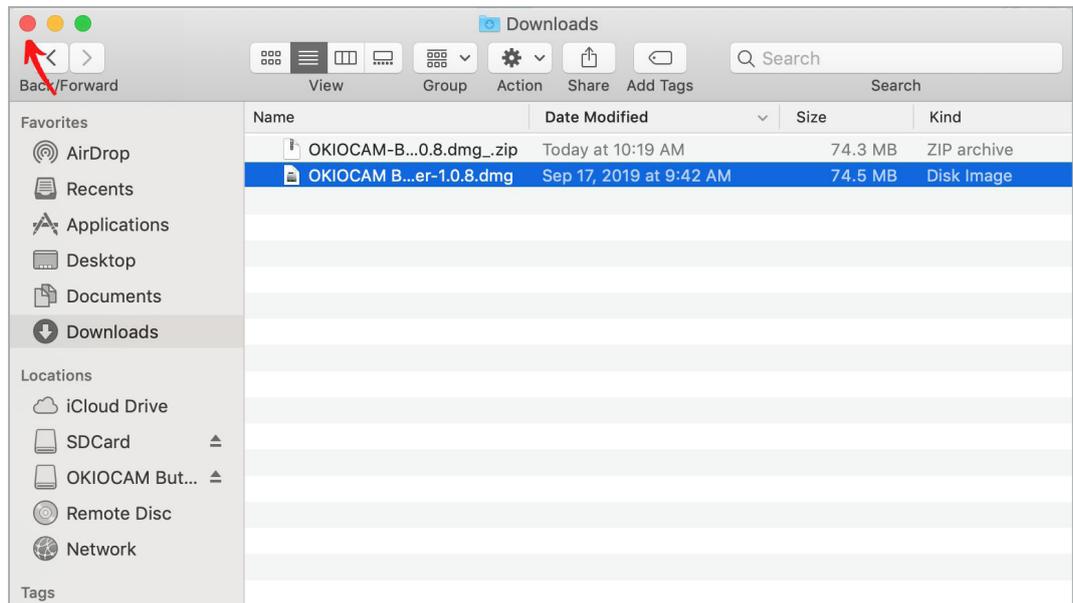


Step 12

On the OKIOLABS download page (www.okiolabs.com/download/), under the heading “For MAC”, click **OKIOLABS Time-Lapse**. A new tab will open, taking you to the Chrome Web Store.

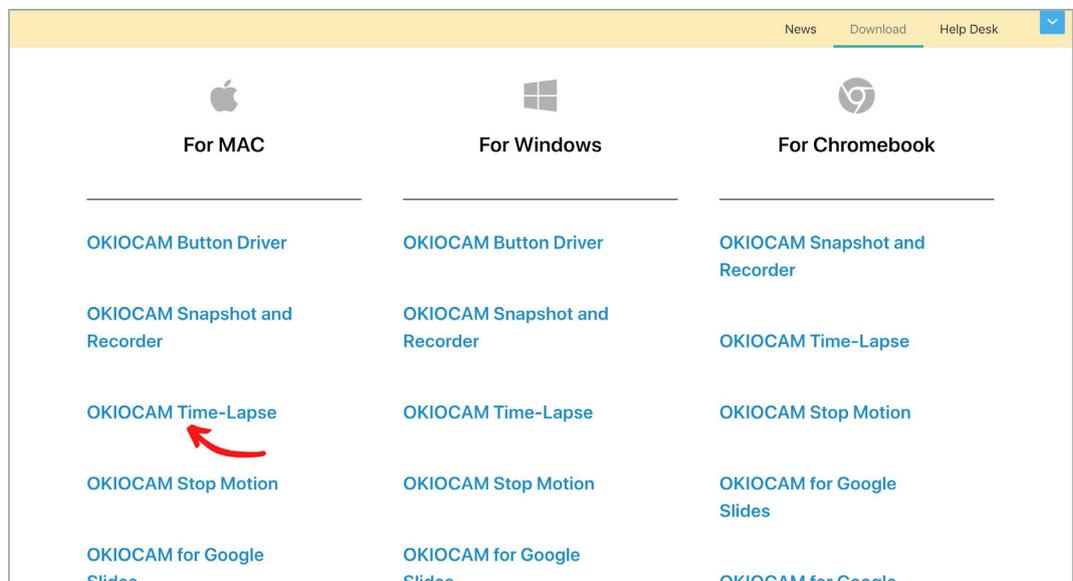


Step 13

Click **Add to Chrome**.

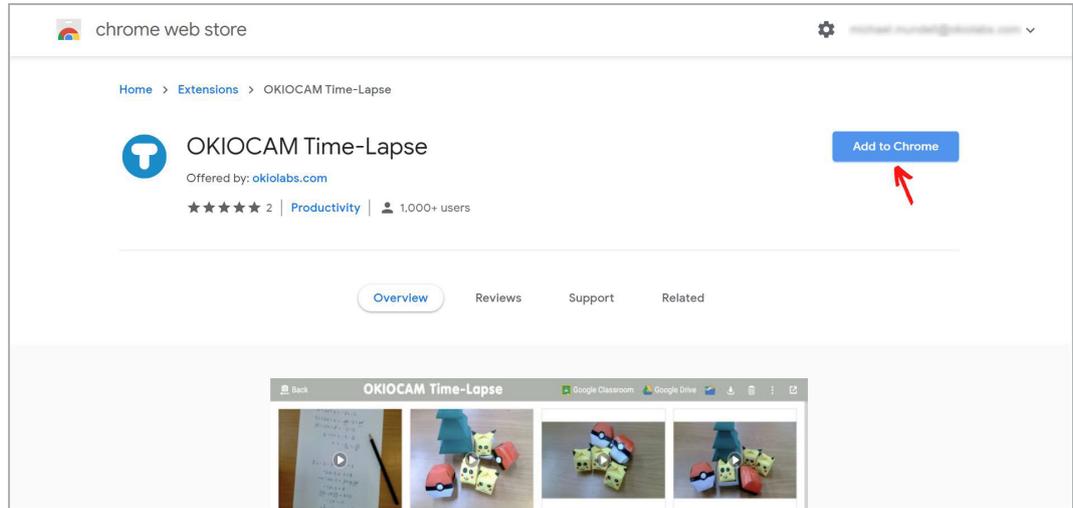


Step 14

A dialog box will pop up, asking you to confirm that you want to install the extension. Click **Add extension**. OKIOCAM Time-Lapse will then begin downloading.

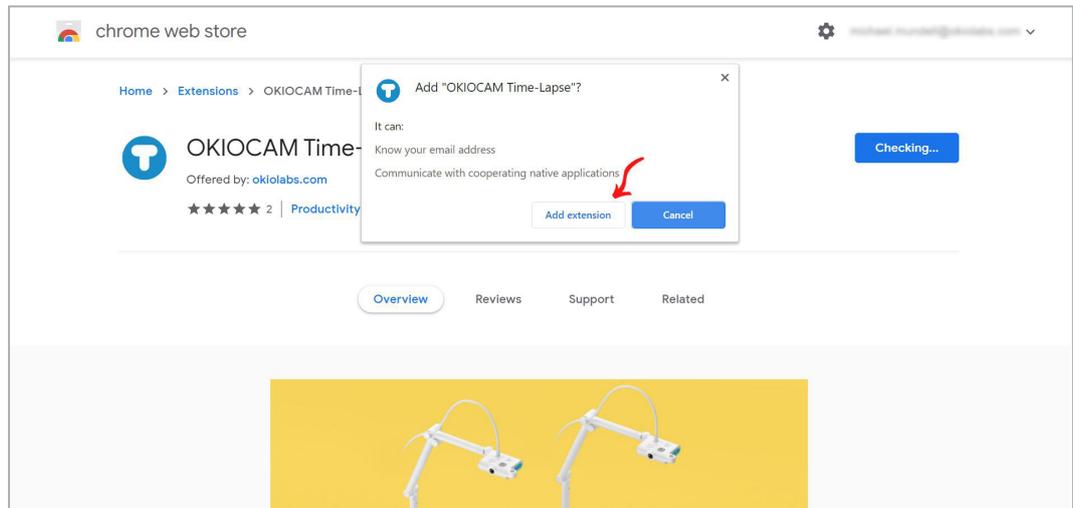


Step 15

Once OKIOCAM Time-Lapse has been added to Google Chrome, the icon <  > will appear in the top right-hand corner of your browser.

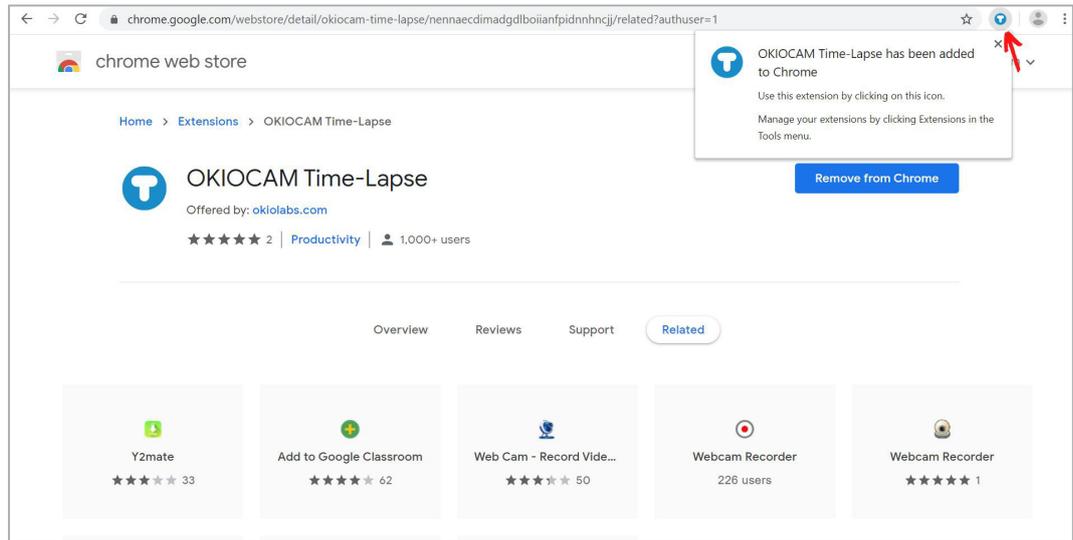


Step 16

Please click on the OKIOCAM Time-Lapse icon.

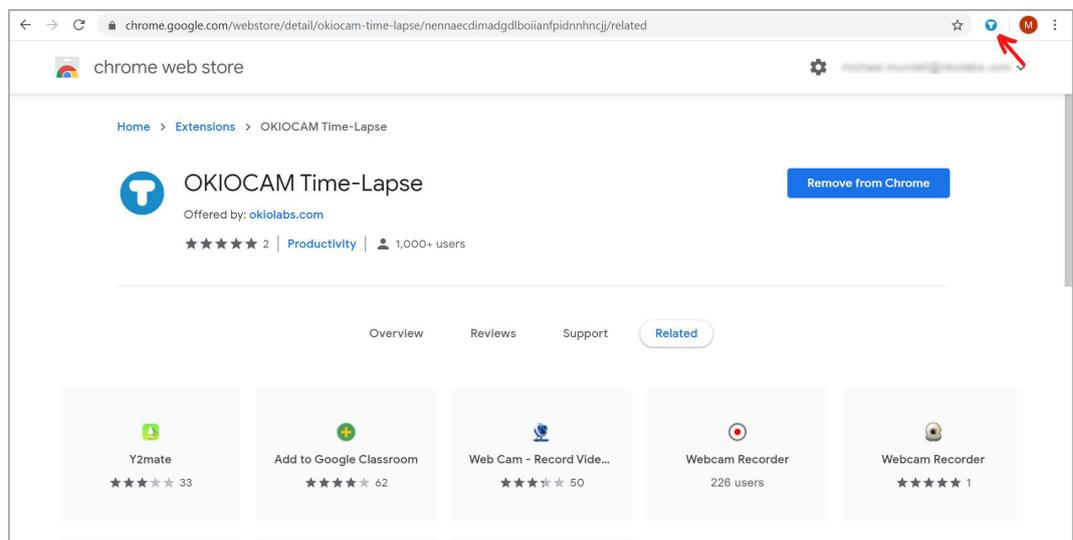


Step 17

Choose the Google account that you wish to use.

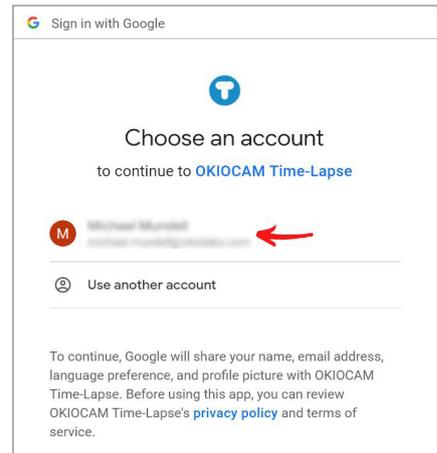

Step 18

Confirm that you grant OKIOCAM Time-Lapse access to your Google Drive and Google Classroom by clicking **Allow**.

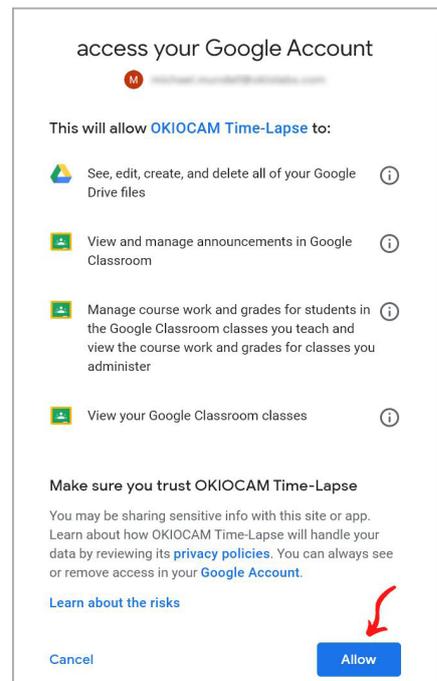


Step 19

Confirm that you give OKIOCAM Time-Lapse access to your computer's camera and microphone. Click **Allow**.




Step 20

Close this tab.

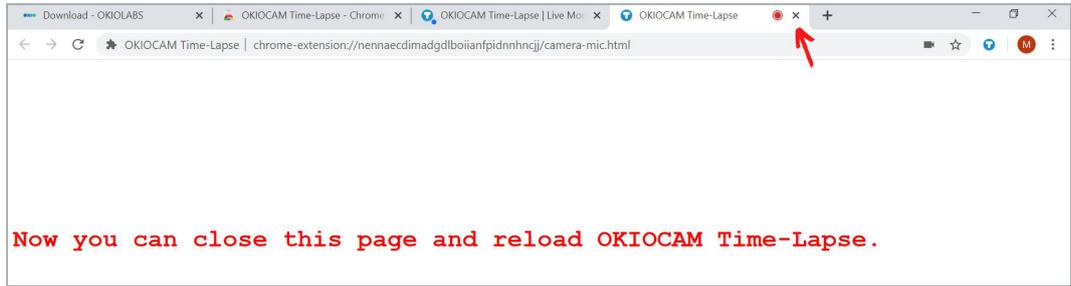


Step 21

After closing the tab, you will be presented with this interface. Click **Next**.

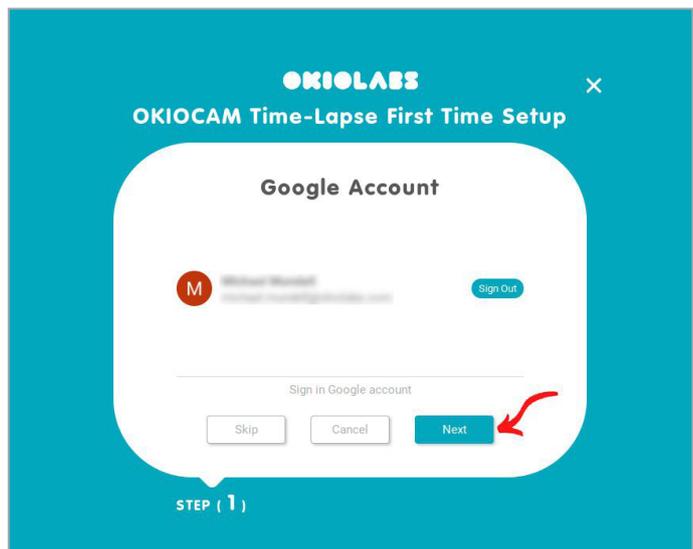


Step 22

Choose the location that you want to save your videos to. Select **Google Drive** to save them to your **Google Drive**. Select **On Local Device** to save them locally. It is recommended that you choose **Google Drive**. Once you have chosen, click **Next**.

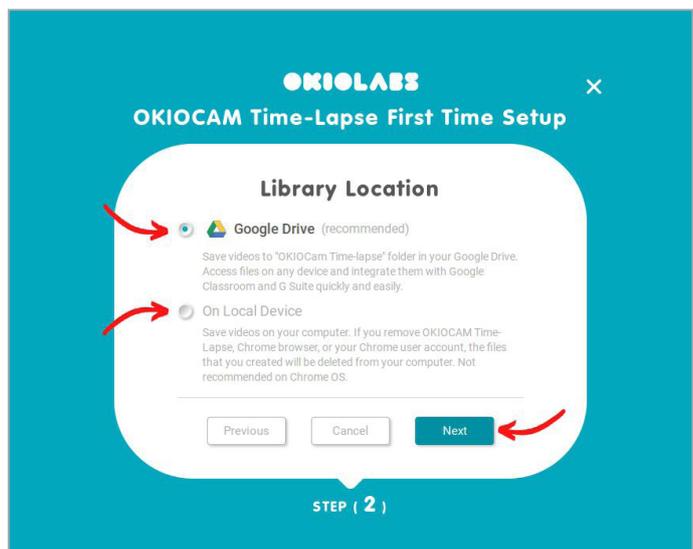


Step
23

Click **Finish**.

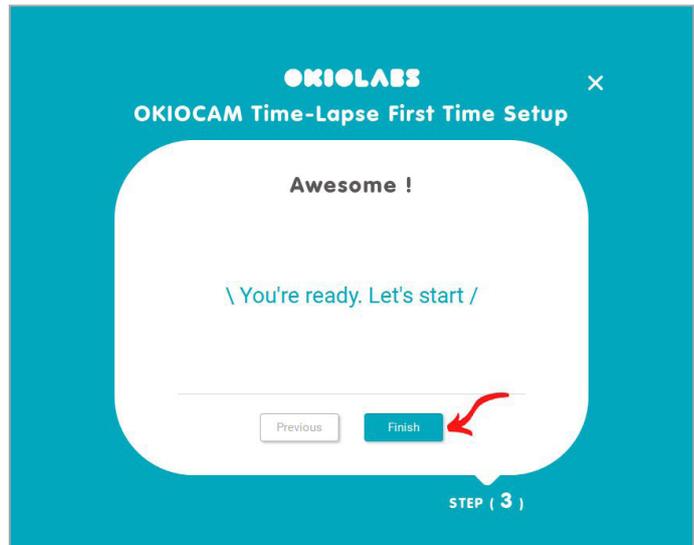Step
24

OKIOLAB Time-Lapse is now fully installed and configured. Click the icon to launch the application.

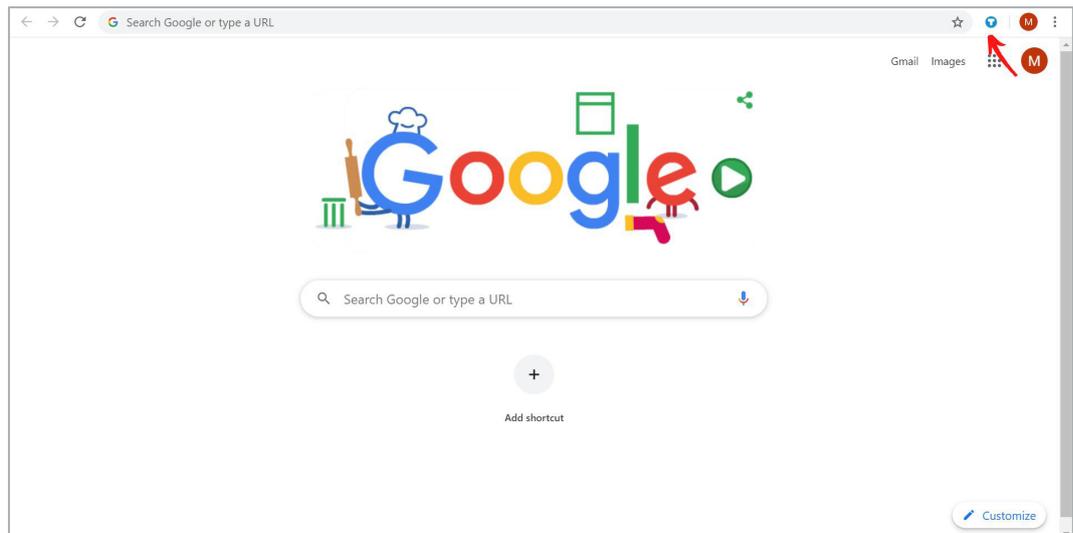

Features & Navigation: Time-Lapse


Live View




- 1 Press  to show the **Menu**. Press again to hide.
- 2 Press  to turn on **Selfie Mode**. Press again to turn off. Selfie Mode vertically rotates the camera 180°.
- 3 Press  to switch to other OKIOCAM apps. If the other apps aren't open, they will be opened in a new tab. If the other apps aren't installed, you will be redirected to the Chrome Web Store to download and install them.
- 4 Press  to access the **Settings** menu.
- 5 Press  to toggle in and out of **Fullscreen**. You can also press Esc to exit **Fullscreen**.
- 6 Press  to access the **Settings** menu.
- 7 Press  to start recording video. Press  to pause recording. Press  to stop recording.
- 8 Press  to enter **Review Mode**.



Use the **Zoom** control to adjust the level of zoom. Press the and icons to adjust the level of zoom in increments of .1x, between 1x and 6x. Zoom can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.

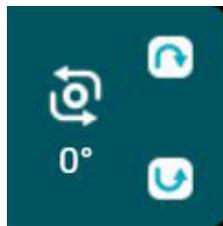

Use the **Rotate** control to rotate the camera display clockwise and counterclockwise in increments of 90°. rotates the camera display clockwise and rotates counterclockwise.

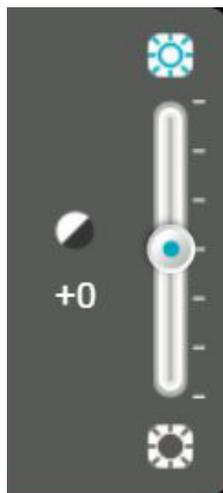

Use the **Exposure** control to adjust the level of exposure. Press the and icons to adjust the level of exposure in increments of 1, between -7 and +7. Exposure can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.



Press the **Freeze** button to freeze the camera feed.




Press the **Focus / Audio adjust** button to adjust the camera's focus, exposure, and white balance automatically.




Press the **Reset** button to reset the camera.


Settings

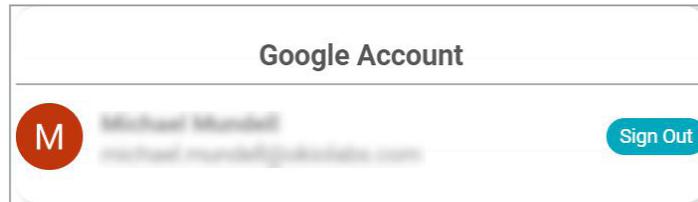

- Press **Sign Out** to sign out of the Google account that is currently signed in.

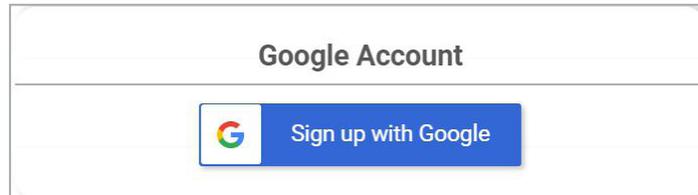

- If you are not currently signed in to a Google account, press **Sign up with Google** to sign in to one.

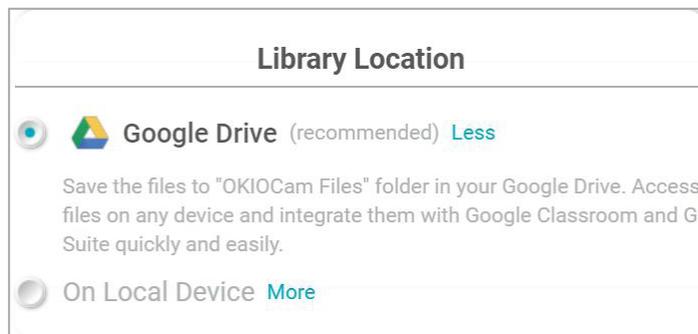

- Change the storage location of your time-lapse videos. Select **Google Drive** to save them to your Google Drive. Select **On Local Device** save them locally.

General Settings	
Camera	OKIOCAM S (eb1a:8021) ▼
Resolution	1600x1200 ▼
Focus Sound	Off ▼

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440
2048x1536
2592x1458
2592x1944


The resolutions available when using OKIOCAM S

The resolutions available when using OKIOCAM T


- From the **Camera** drop-down menu, you can choose which camera you want to use with OKIOCAM Time-Lapse.
- Use the **Resolution** drop-down menu to select which resolution you would like to view the Live View and record your time-lapse videos in. Available resolutions will depend on which camera you are using.
- Use the **Focus Sound** drop-down menu to choose if you want to hear a beeping sound after the camera focuses or not.

Record Settings	
Frequency	2 pics per second ▼
Auto Stop	10 minutes ▼

- From the **Frequency** drop-down menu, you can select the frequency that pictures are taken (1 picture, 2 pictures, or 3 pictures per second).
- Use the **Auto Stop** drop-down menu to choose the length of time that time-lapse recordings will automatically stop recording at.

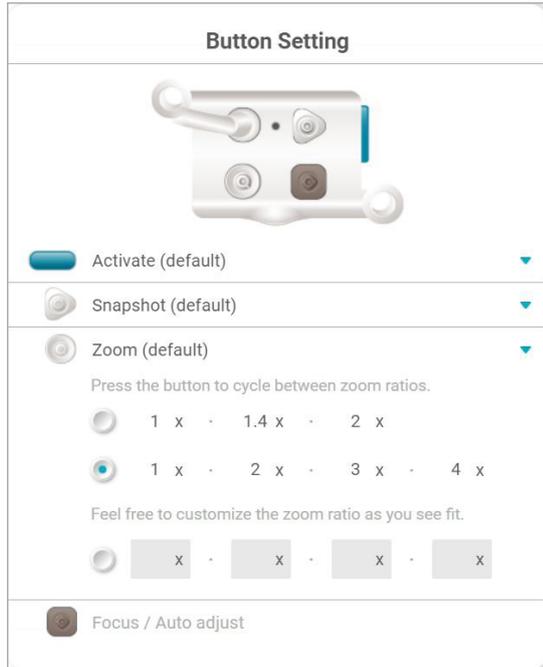

- Use the drop-down menus to reassign different functions to the physical buttons on the camera.
- Choose the zoom ratios that will be cycled through when the button assigned to zoom functionality is pressed. Input custom zoom ratios if you wish.

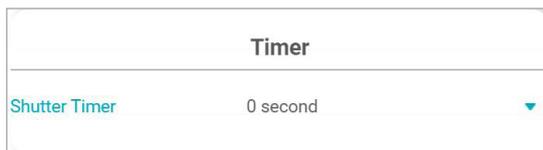

- Assign a shutter timer time of either 0, 2, or 5 seconds using the **Shutter Timer** drop-down menu.



 
Press **Quit** to exit OKIOCAM Time-Lapse.



Press **First Time Setup** to redo the initial OKIOCAM Time-Lapse setup.




Press **About Us** to learn more about available OKIOCAM apps.



Press **Help** to open the OKIOLABS FAQ.

Review Mode

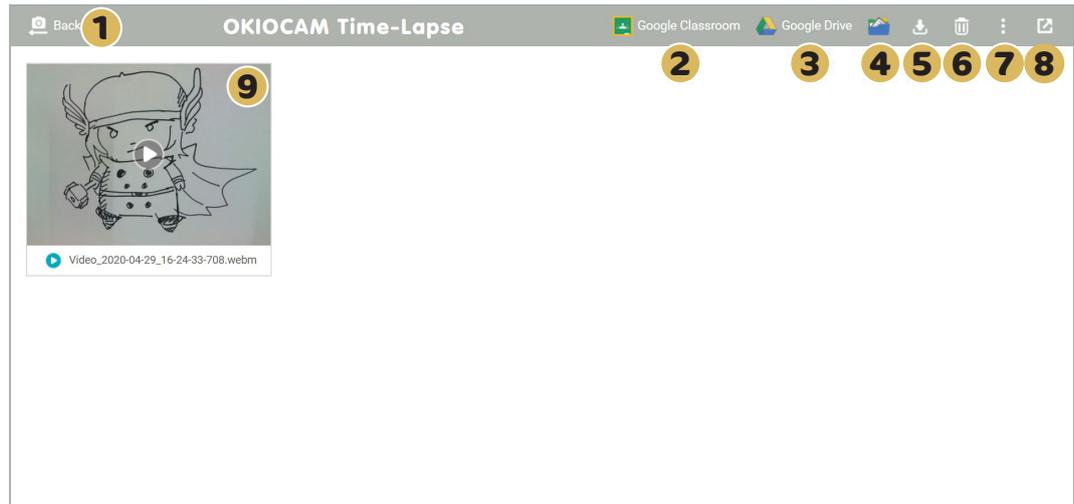

- 1 Press  to go back to the Live View.
- 2 Press **Google Classroom** to upload any selected files to your Google Classroom.
- 3 Press **Google Drive** to upload any selected files to your Google Drive.
- 4 Press  to open your Google Drive OKIOCAM Files folder in Google Drive.
- 5 Press  to download any selected files.
- 6 Press  to delete any selected files from your computer and Google Drive.
- 7 Press  to be presented with the option to delete all files, open a selected file in a new tab, or view information (File Name, Resolution, Create Date, File Size) for a selected file.
- 8 Press  to toggle in and out of **Fullscreen**.
- 9 Left-click on a file to select it. Right-click on a selected file to be presented with the options to delete the file, upload to file to Google Drive, open the file in a new tab, or download the file.

Creating Time-Lapse Videos





- 1 Press  to start recording. Press  to stop recording.
- 2 Press  to pause recording. Press  to resume recording if paused.



- 1 Drag the leftmost icon along the timeline to select the starting frame of the time-lapse video.
- 2 Drag the rightmost icon along the timeline to select the ending frame of the time-lapse video.
- 3 Drag the icon along the timeline to scan through all the frames in the current project.
- 4 The leftmost icon shows the currently selected starting frame.
- 5 The rightmost icon shows the currently selected ending frame.
- 6 Select from the , , , and icons to choose the speed rate multiplier of the final time-lapse video. Alternatively, click on the drop-down menu () to choose a number between 2 and 20 for the speed rate multiplier setting.
- 7 Select the icon to discard the time-lapse video.
- 8 Click the icon to go to the next stage of time-lapse video creation.
- 9 Press the button to preview the time-lapse video.



- 1 Click the icon to go back to the previous stage of time-lapse video creation.
- 2 Select the icon to add background music to the time-lapse video. Uncheck this icon if you want the time-lapse video to have no audio.
- 3 Click the drop-down menu () to either choose from a selection of royalty-free music to add to the time-lapse video or upload your own locally stored audio file. Supported file formats: MP3, WAV, OGG, and FLAC.
- 4 Use the music preview tool () to listen to the chosen audio track.
- 5 Click on the icon to merge the chosen audio file with the time-lapse video. If you wish to remove the chosen audio file, press the newly created button.
- 6 Select the icon to discard the time-lapse video.
- 7 Select the icon to finish creating the time-lapse video.

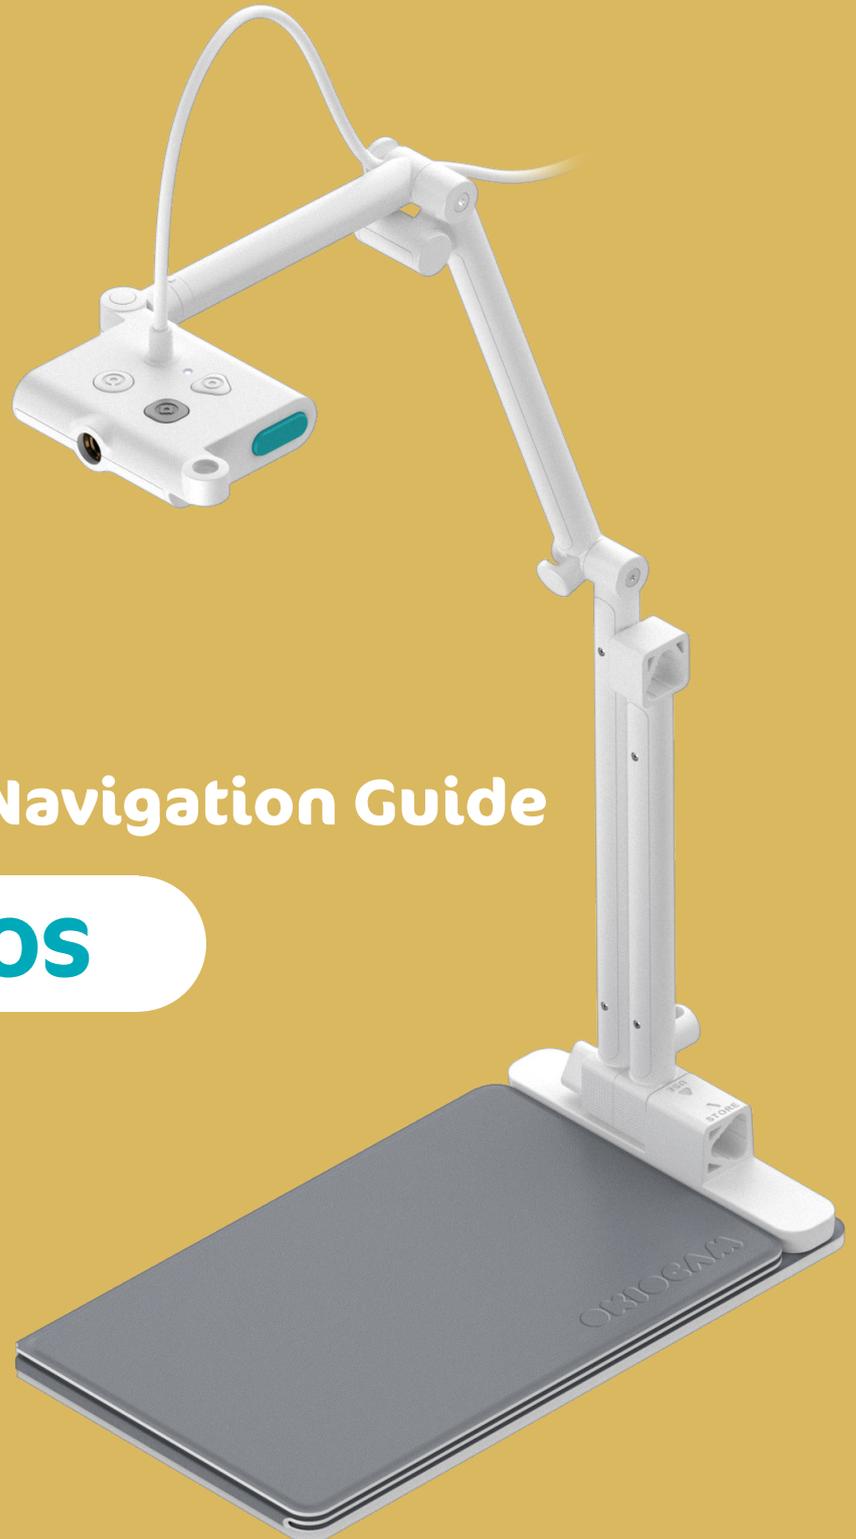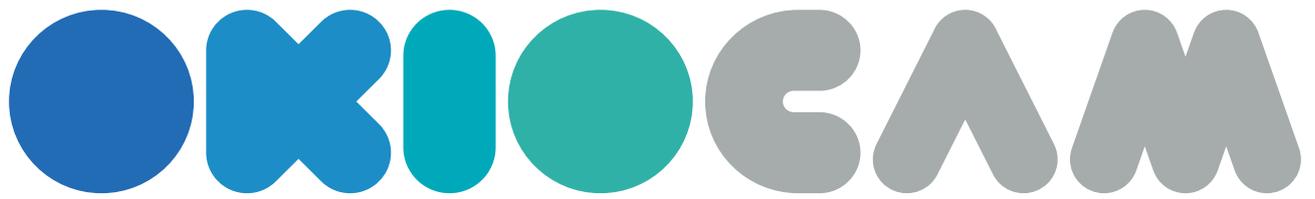

Time-Lapse Installation & Navigation Guide

Chrome OS


OKIOCAM is the first USB camera specially designed for education users, and OKIOCAM Time-Lapse is one of the primary applications in the OKIOCAM's product package. This guide will walk you through the installation process for OKIOCAM Time-Lapse.

Step 1

Open Google Chrome and go to the OKIOLABS download page (www.okiolabs.com/download/).


Step 2

Click **OKIOCAM Time-Lapse**. A new tab will open, taking you to the Chrome Web Store.

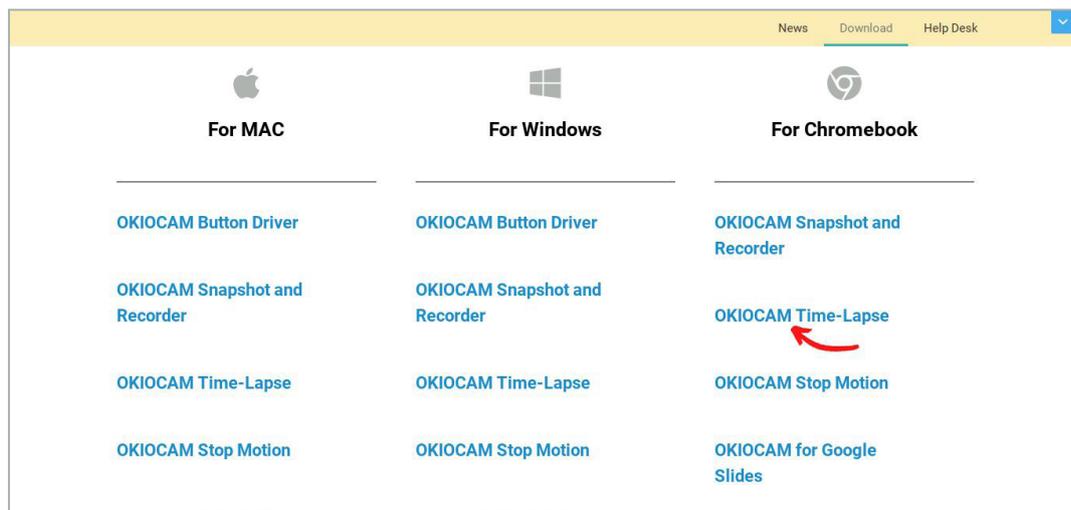


Step 3

In the newly opened tab, click **Add to Chrome**.

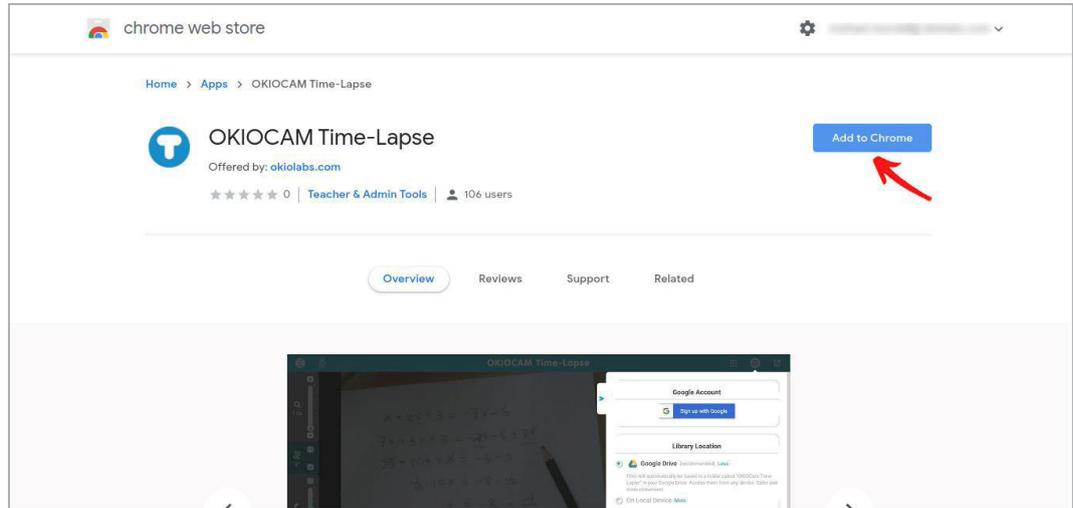


Step 4

A dialog box will appear, informing you of how OKIOCAM Time-Lapse can interact with your Chromebook. Click **Add app**. The app will then begin downloading.

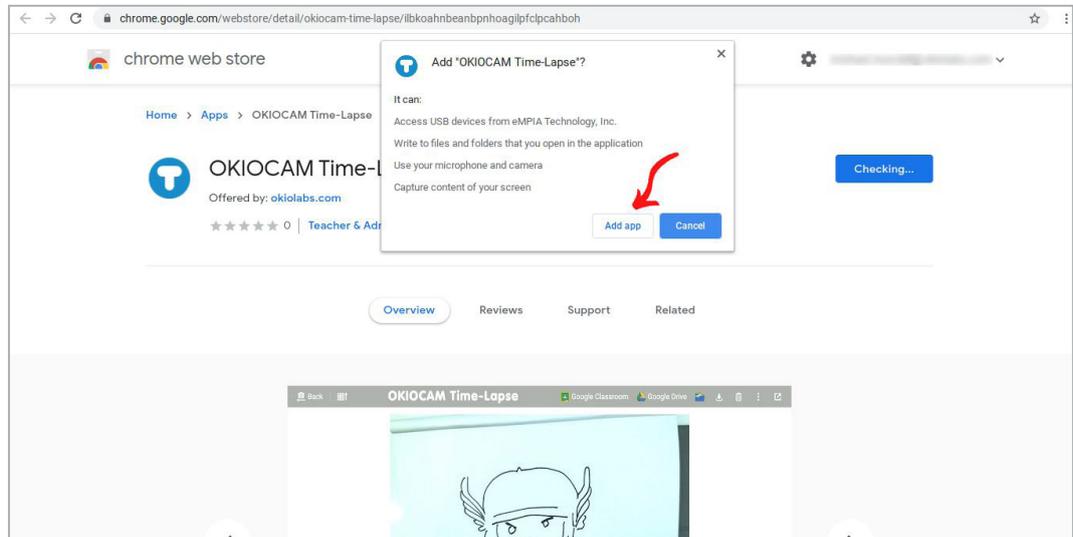


Step 5

Once the download has completed, click **Launch app**.

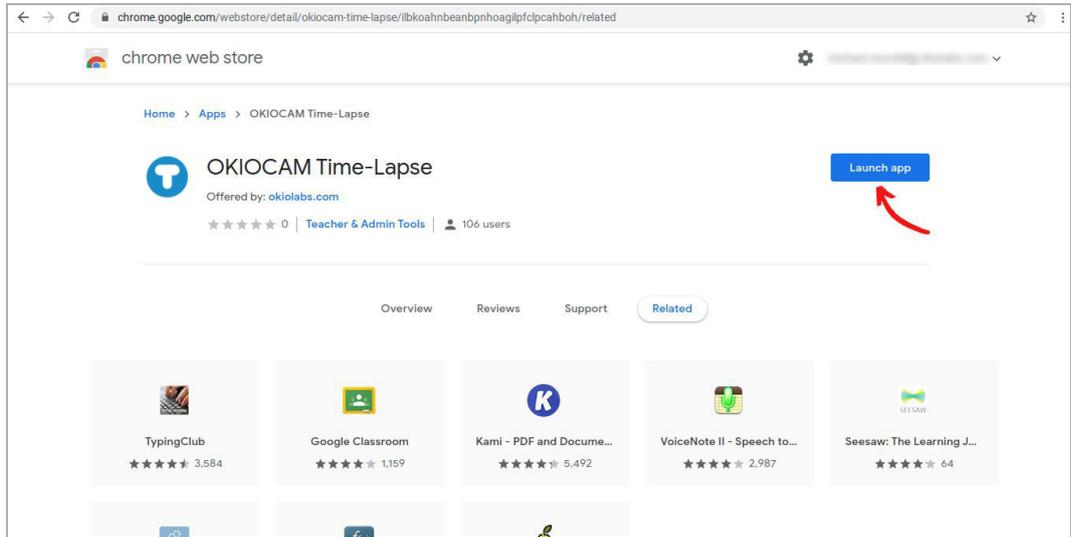


Step 6

OKIOLABS Time-Lapse will open. Click **Sign up with Google**.

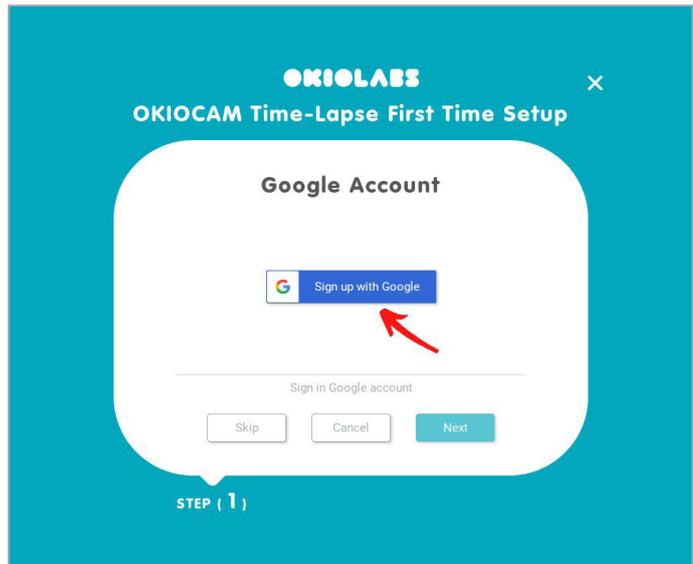


Step 7

Choose the Google account that you wish to use.

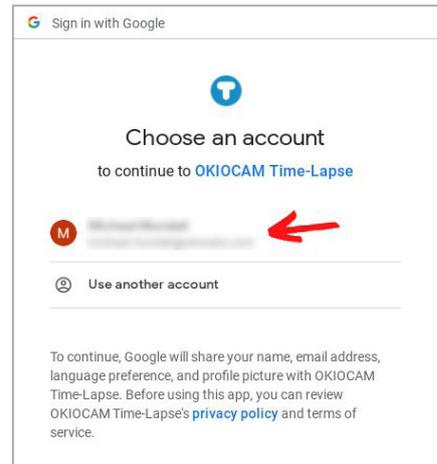


Step 8

Confirm that you grant OKIOCAM Time-Lapse access to your Google Drive and Google Classroom by clicking **Allow**.

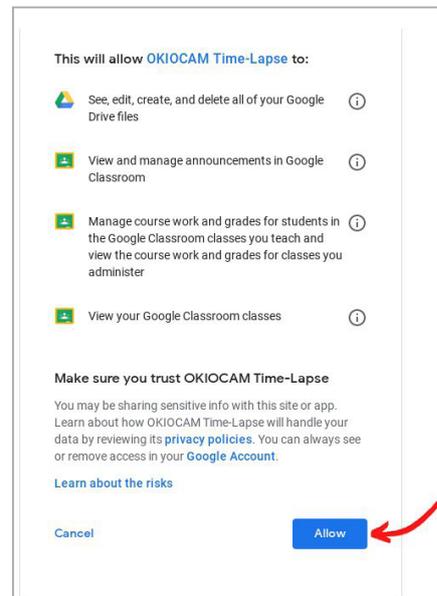


Step 9

Click **Next**.

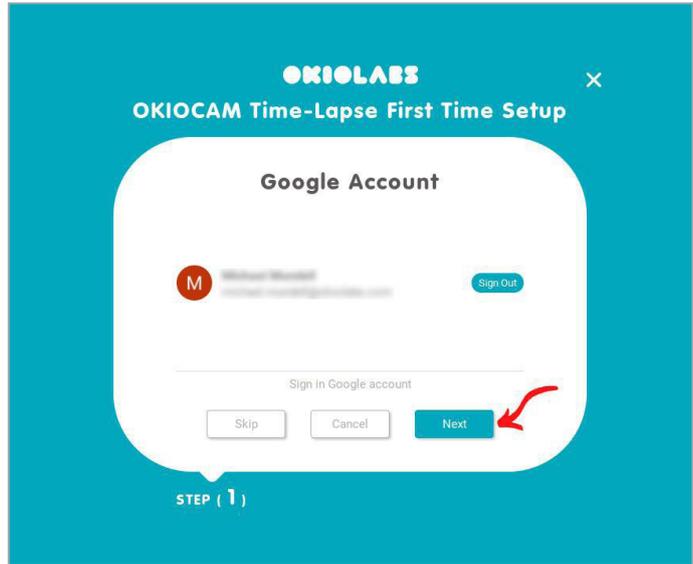


Step 10

Choose the location that you want to save your videos to. Select **Google Drive** to save them to your Google Drive. Select **On Local Device** to save them locally on your Chromebook. It is recommended that you choose **Google Drive**. Once you have chosen, click **Next**.

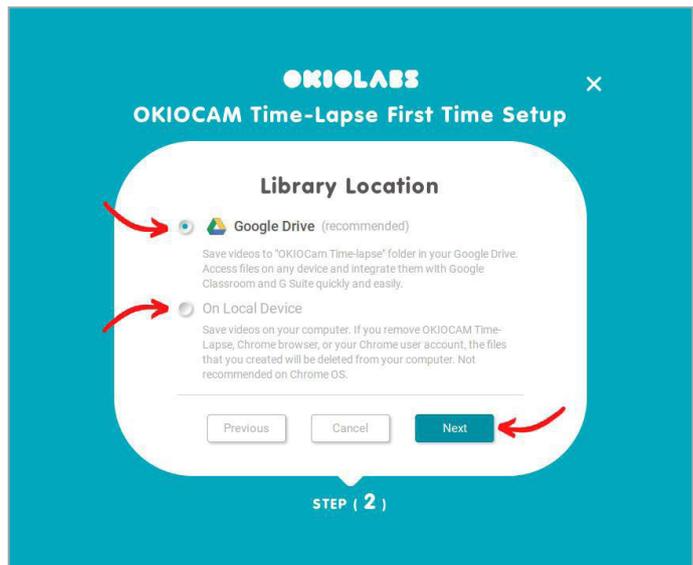

**Step
11**

Click **Finish**. OKIOCAM Time-Lapse is now installed.

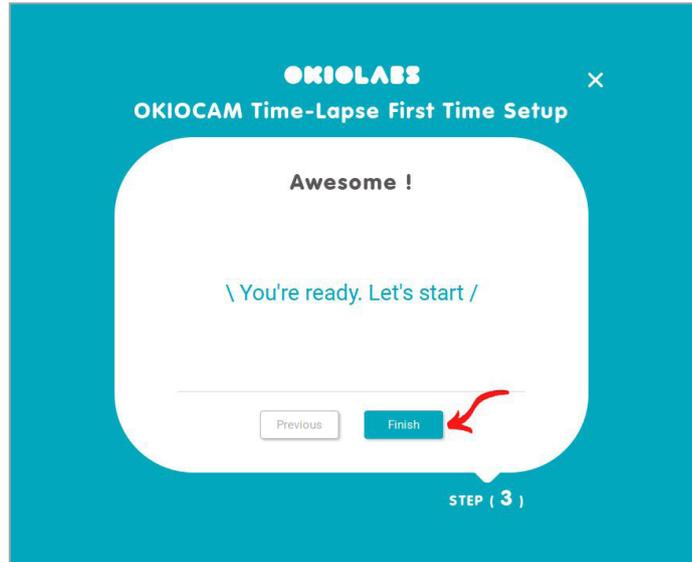


Features & Navigation: Time-Lapse


Live
View




- 1 Press  to show the **Menu**. Press again to hide.
- 2 Press  to turn on **Selfie Mode**. Press again to turn off. Selfie Mode vertically rotates the camera 180°.
- 3 Press  to switch to other OKIOCAM apps. If the other apps aren't open, they will be opened in a new tab. If the other apps aren't installed, you will be redirected to the Chrome Web Store to download and install them.
- 4 Press  to access the **Settings** menu.
- 5 Press  to toggle in and out of **Fullscreen**. You can also press Esc to exit **Fullscreen**.
- 6 Press  to access the **Settings** menu.
- 7 Press  to start recording video. Press  to pause recording. Press  to stop recording.
- 8 Press  to enter **Review Mode**.

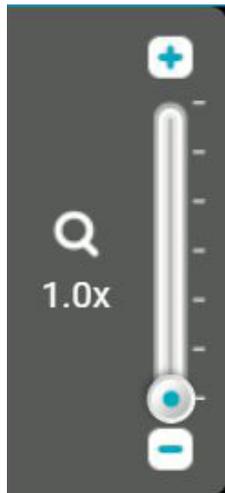

Use the **Zoom** control to adjust the level of zoom. Press the and icons to adjust the level of zoom in increments of .1x, between 1x and 6x. Zoom can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.

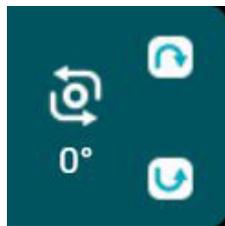

Use the **Rotate** control to rotate the camera display clockwise and counterclockwise in increments of 90°. rotates the camera display clockwise and rotates counterclockwise.

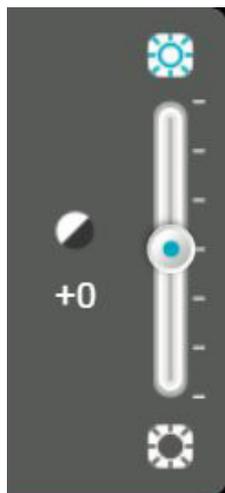

Use the **Exposure** control to adjust the level of exposure. Press the and icons to adjust the level of exposure in increments of 1, between -7 and +7. Exposure can also be adjusted using the slider by left-clicking on and dragging the mouse either up or down.



Press the **Freeze** button to freeze the camera feed.




Press the **Focus / Audio adjust** button to adjust the camera's focus, exposure, and white balance automatically.




Press the **Reset** button to reset the camera.


Settings

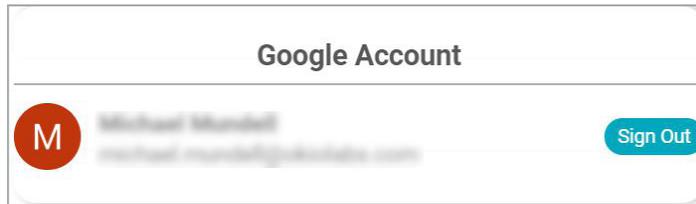

- Press **Sign Out** to sign out of the Google account that is currently signed in.

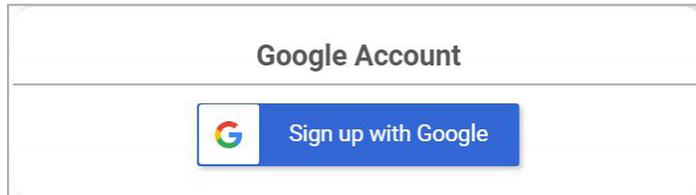

- If you are not currently signed in to a Google account, press **Sign up with Google** to sign in to one.

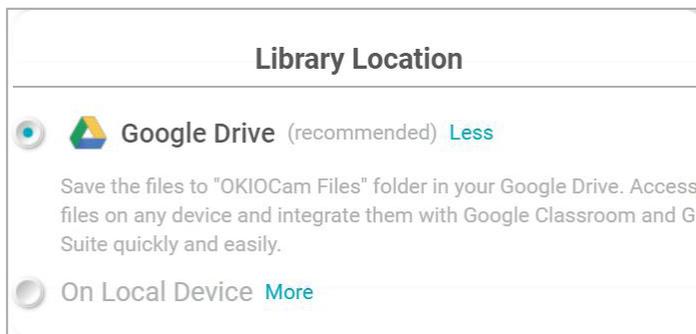

- Change the storage location of your time-lapse videos. Select **Google Drive** to save them to your Google Drive. Select **On Local Device** save them locally.

General Settings	
Camera	OKIOCAM S (eb1a:8021) ▼
Resolution	1600x1200 ▼
Focus Sound	Off ▼

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440

800x600
1024x768
1280x720
1600x1200
1920x1080
1920x1440
2048x1536
2592x1458
2592x1944


The resolutions available when using OKIOCAM S

The resolutions available when using OKIOCAM T


- From the **Camera** drop-down menu, you can choose which camera you want to use with OKIOCAM Time-Lapse.
- Use the **Resolution** drop-down menu to select which resolution you would like to view the Live View and record your time-lapse videos in. Available resolutions will depend on which camera you are using.
- Use the **Focus Sound** drop-down menu to choose if you want to hear a beeping sound after the camera focuses or not.

Record Settings	
Frequency	2 pics per second ▼
Auto Stop	10 minutes ▼

- From the **Frequency** drop-down menu, you can select the frequency that pictures are taken (1 picture, 2 pictures, or 3 pictures per second).
- Use the **Auto Stop** drop-down menu to choose the length of time that time-lapse recordings will automatically stop recording at.

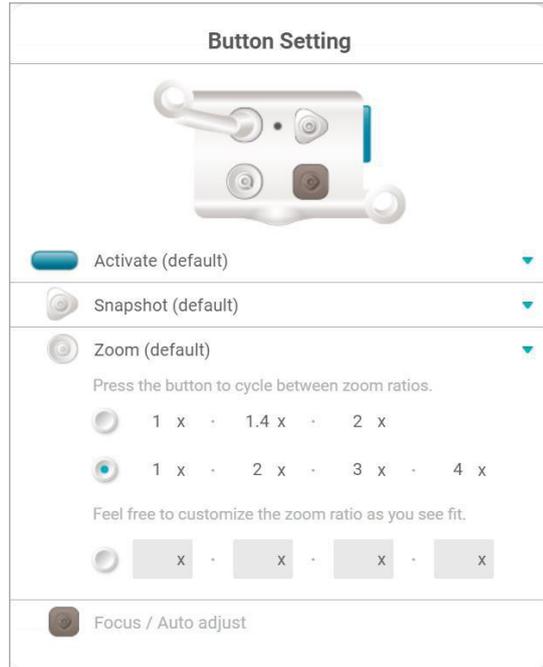

- Use the drop-down menus to reassign different functions to the physical buttons on the camera.
- Choose the zoom ratios that will be cycled through when the button assigned to zoom functionality is pressed. Input custom zoom ratios if you wish.

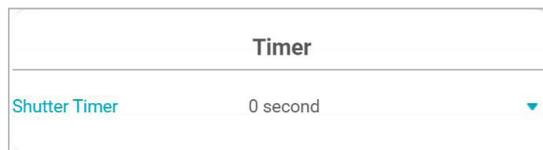

- Assign a shutter timer time of either 0, 2, or 5 seconds using the **Shutter Timer** drop-down menu.



 
Press **Quit** to exit OKIOCAM Time-Lapse.



Press **First Time Setup** to redo the initial OKIOCAM Time-Lapse setup.




Press **About Us** to learn more about available OKIOCAM apps.



Press **Help** to open the OKIOLABS FAQ.

Review Mode

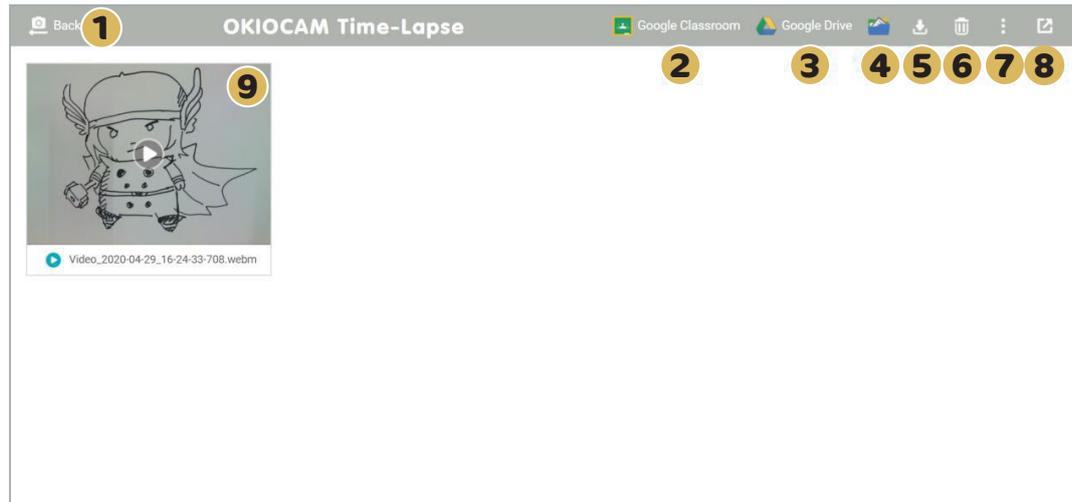

- 1 Press  to go back to the Live View.
- 2 Press **Google Classroom** to upload any selected files to your Google Classroom.
- 3 Press **Google Drive** to upload any selected files to your Google Drive.
- 4 Press  to open your Google Drive OKIOCAM Files folder in Google Drive.
- 5 Press  to download any selected files.
- 6 Press  to delete any selected files from your computer and Google Drive.
- 7 Press  to be presented with the option to delete all files, open a selected file in a new tab, or view information (File Name, Resolution, Create Date, File Size) for a selected file.
- 8 Press  to toggle in and out of **Fullscreen**.
- 9 Left-click on a file to select it. Right-click on a selected file to be presented with the options to delete the file, upload to file to Google Drive, open the file in a new tab, or download the file.

Creating Time-Lapse Videos



- 1** Press  to start recording. Press  to stop recording.
- 2** Press  to pause recording. Press  to resume recording if paused.



- 1 Drag the leftmost icon along the timeline to select the starting frame of the time-lapse video.
- 2 Drag the rightmost icon along the timeline to select the ending frame of the time-lapse video.
- 3 Drag the icon along the timeline to scan through all the frames in the current project.
- 4 The leftmost icon shows the currently selected starting frame.
- 5 The rightmost icon shows the currently selected ending frame.
- 6 Select from the , , , and icons to choose the speed rate multiplier of the final time-lapse video. Alternatively, click on the drop-down menu () to choose a number between 2 and 20 for the speed rate multiplier setting.
- 7 Select the icon to discard the time-lapse video.
- 8 Click the icon to go to the next stage of time-lapse video creation.
- 9 Press the button to preview the time-lapse video.



- 1 Click the icon to go back to the previous stage of time-lapse video creation.
- 2 Select the icon to add background music to the time-lapse video. Uncheck this icon if you want the time-lapse video to have no audio.
- 3 Click the drop-down menu () to either choose from a selection of royalty-free music to add to the time-lapse video or upload your own locally stored audio file. Supported file formats: MP3, WAV, OGG, and FLAC.
- 4 Use the music preview tool () to listen to the chosen audio track.
- 5 Click on the icon to merge the chosen audio file with the time-lapse video. If you wish to remove the chosen audio file, press the newly created button.
- 6 Select the icon to discard the time-lapse video.
- 7 Select the icon to finish creating the time-lapse video.

Thank you!

For more information, visit
<https://okiolabs.com/>

Need help? Contact us at
support@okiolabs.com

Sales inquiries? Contact us at
sales@okiolabs.com